
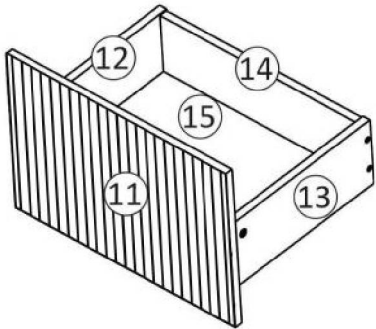
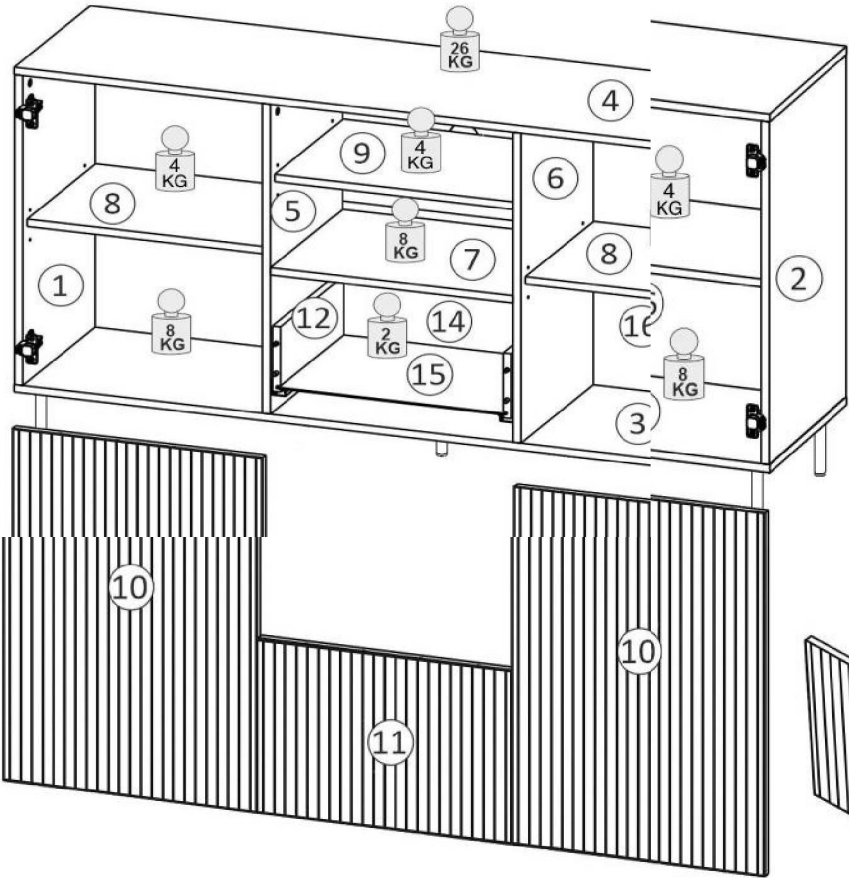


IMPORTANT – READ CAREFULLY – RETAIN FOR FUTURE REFERENCE
WICHTIG – SORGFÄLTIG LESEN UND AUFBEWAHREN

Model: **PAXOS-KM-1** Blatt Nr: **1/10**

D MONTAGEANLEITUNG
GB ASSEMBLY INSTRUCTIONS


Do montažu
potrebne są:
Für die Montage
dieser Type
benötigen Sie:

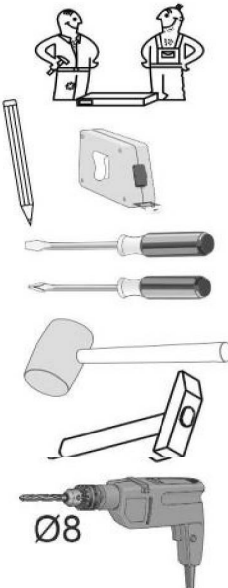

REP	DIM			QTY	PACKAGE
1	669	400	16	1	2/2
2	669	400	16	1	2/2
3	1505	400	16	1	1/2
4	1505	400	16	1	1/2
5	669	380	16	1	1/2
6	669	380	16	1	1/2
7	485	380	16	1	2/2
8	476	360	16	2	1/2
9	484	360	16	1	1/2
10	709	498	16	2	2/2
11	498	340	16	1	2/2
12	350	140	16	1	2/2
13	350	140	16	1	2/2
14	445	124	16	1	2/2
15	459	355	3	1	2/2
16	1485	682	3	1	1/2

BAG 5

B5

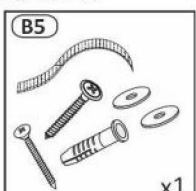

x1

BAG 1

K2	T1	M1	S10	P2	K7	K11	W2	Z2
x22	x14	x14	US 3x18 x10	3,5x18 x14	x1	x12	x14	x8

BAG 2

Z7	S3
x4	4x13 x8









BAG 3

U1	P10
L-350 x1L x1R	6,3x13 x4






BAG 4

N1	N2	W37
x4	x1	4x16 x20





1

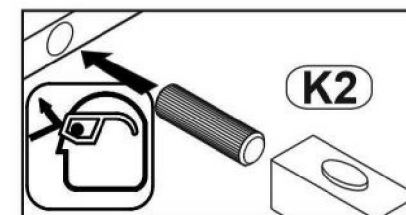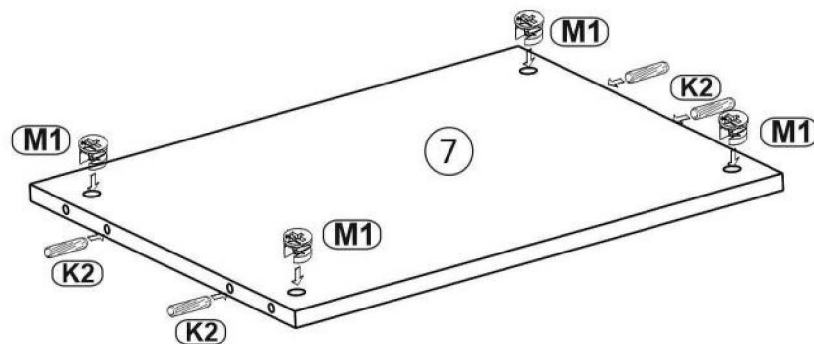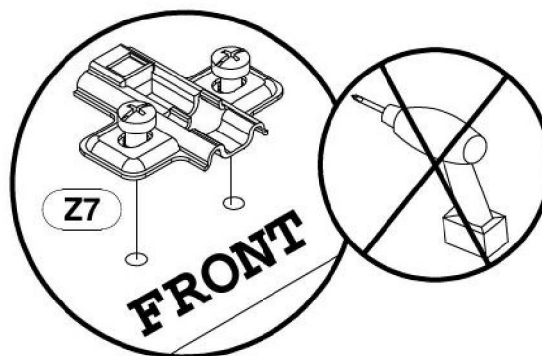
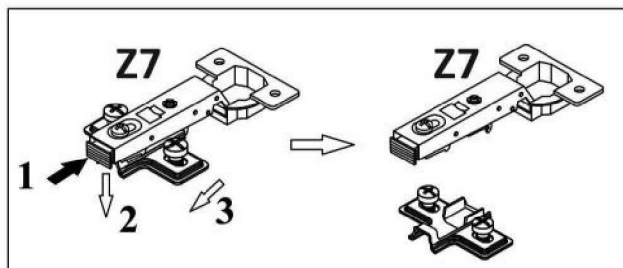
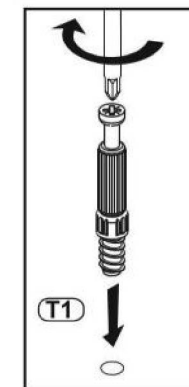
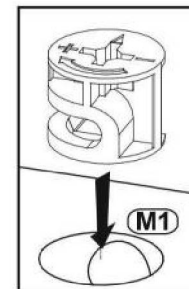
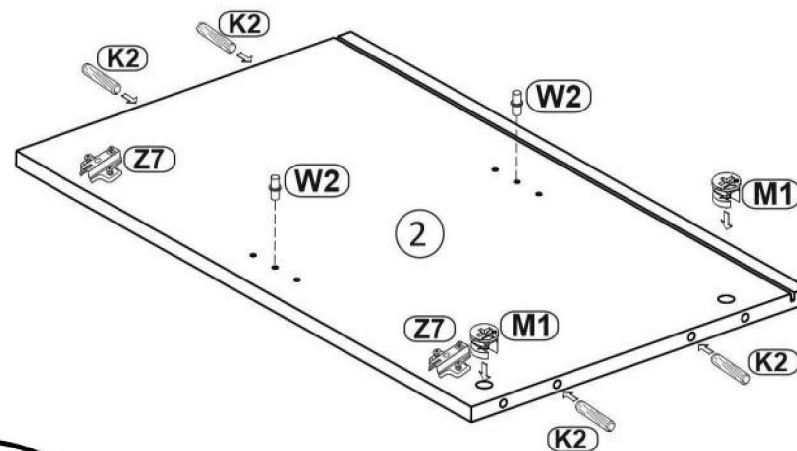
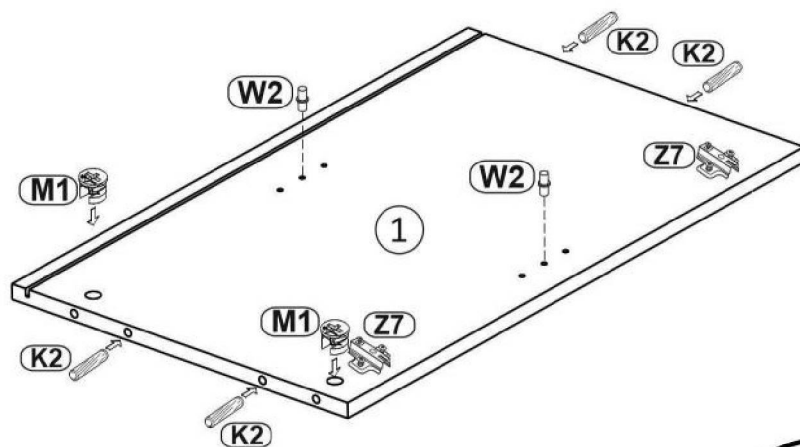


2

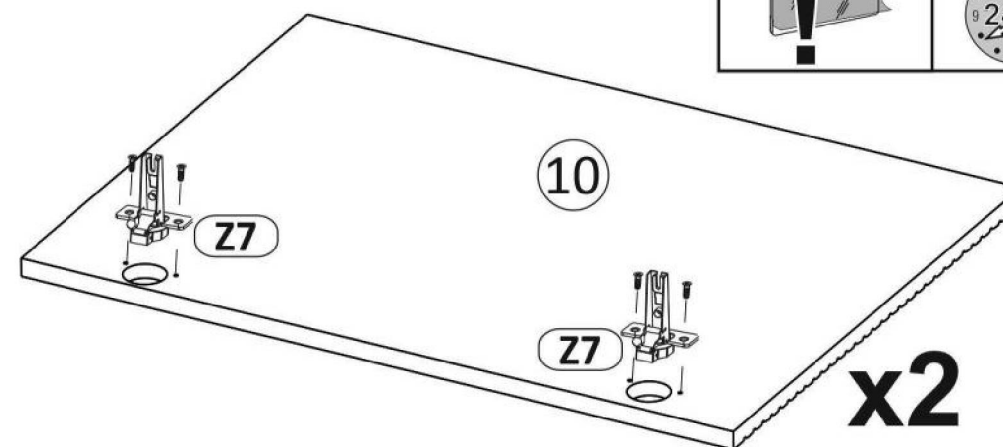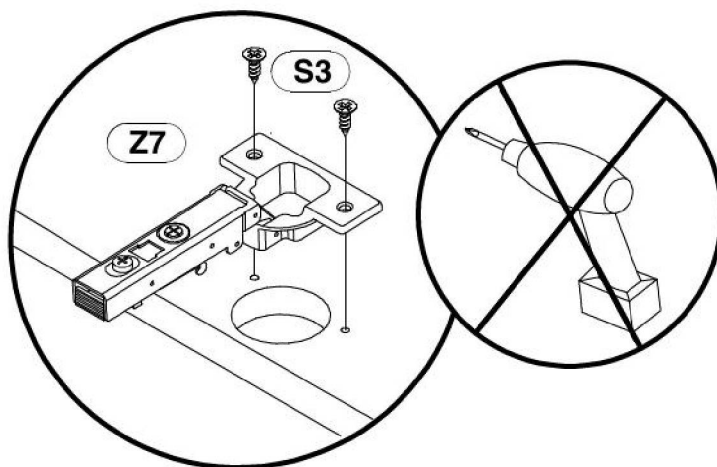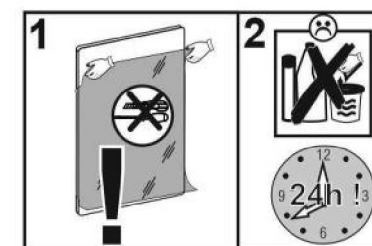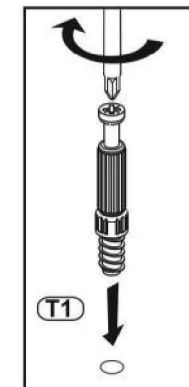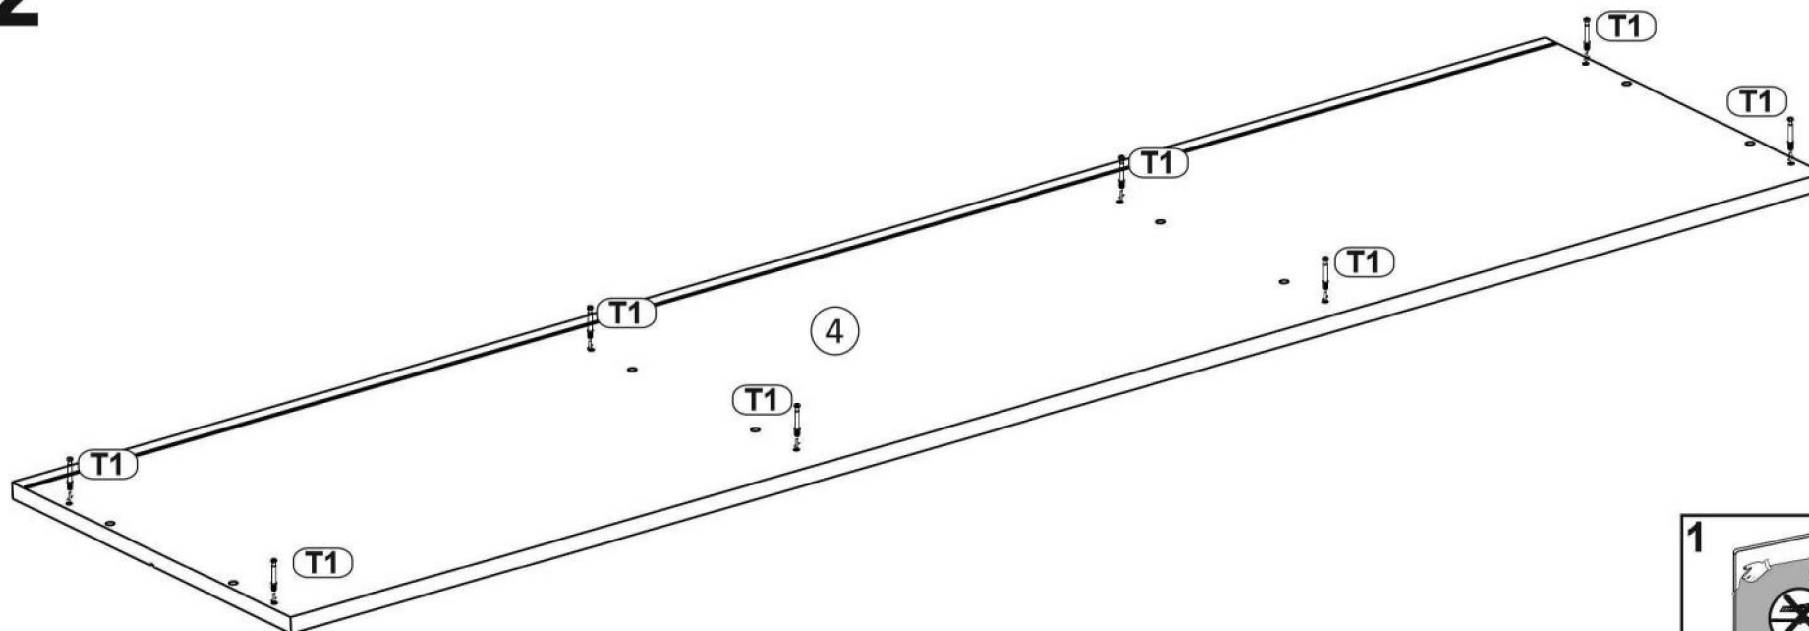


3

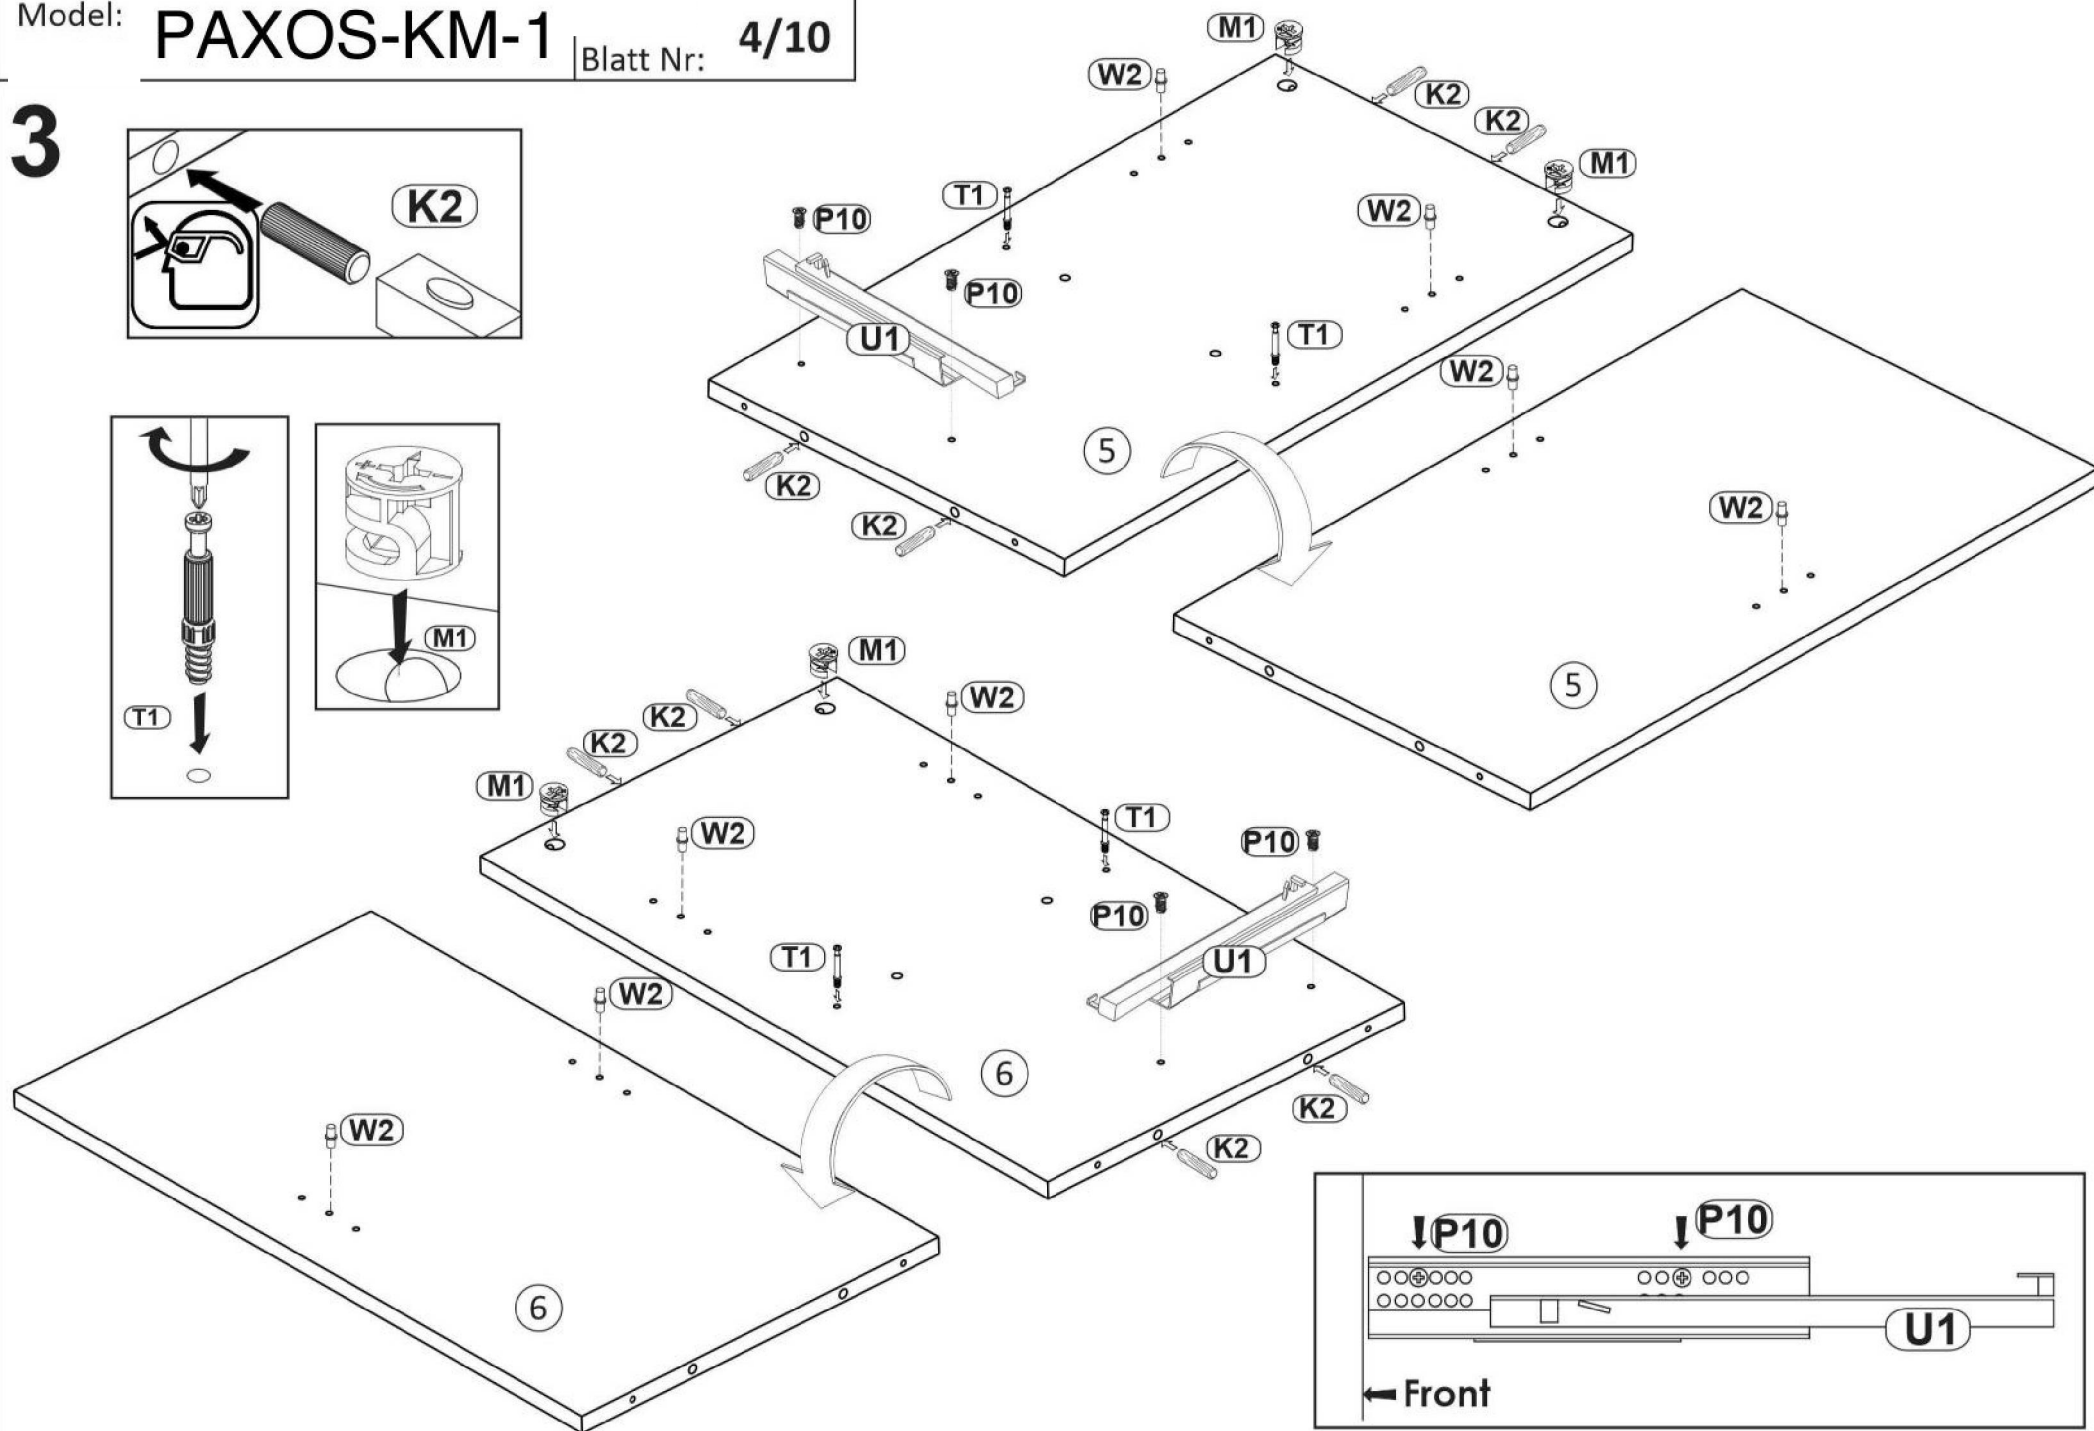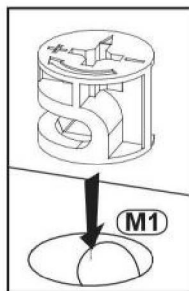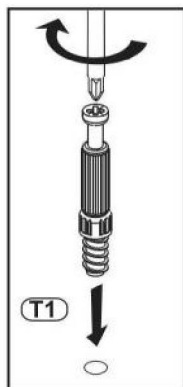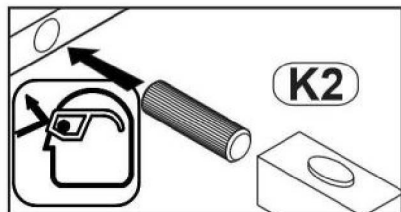


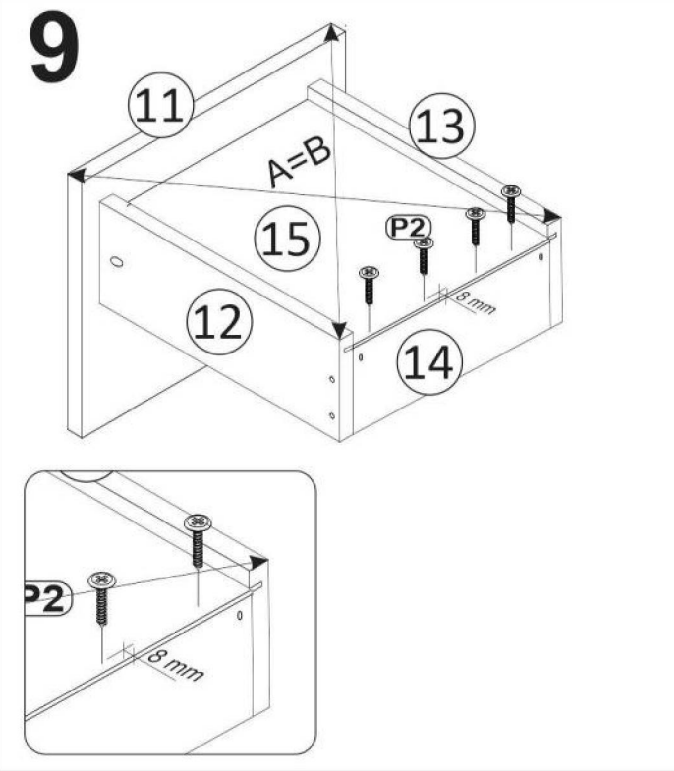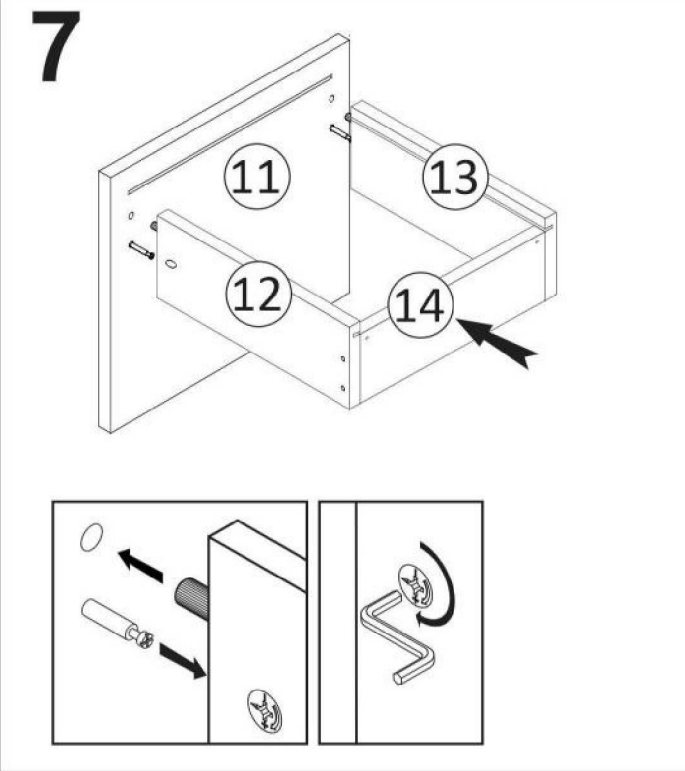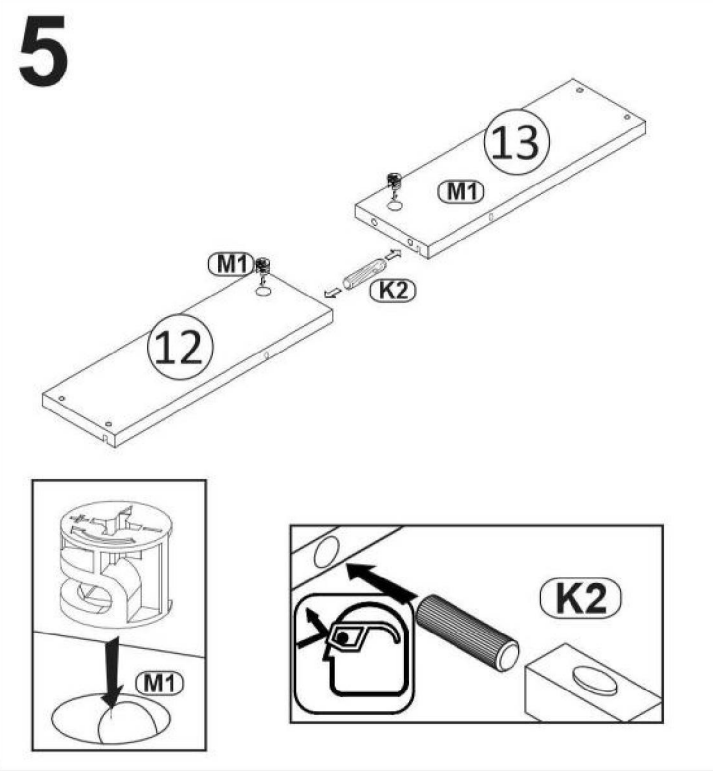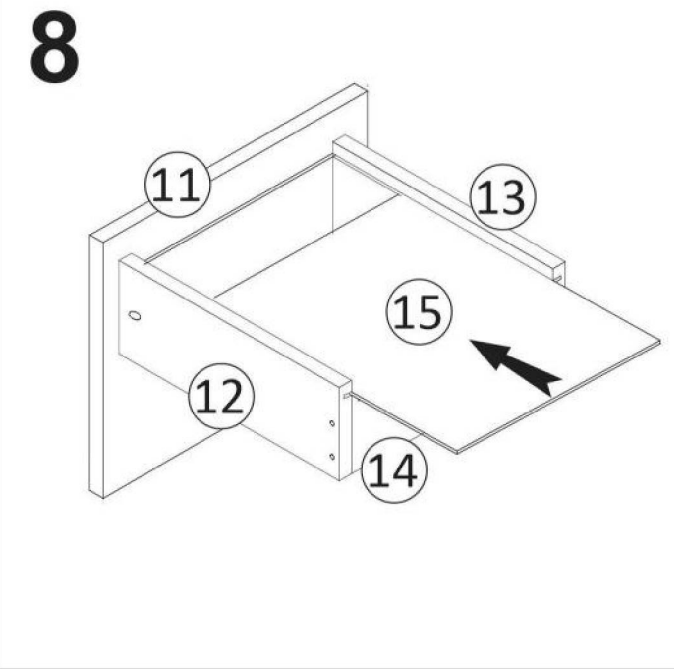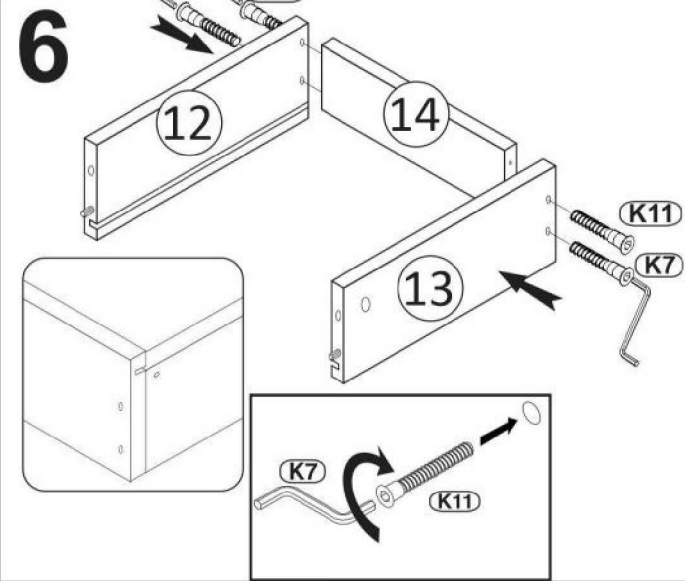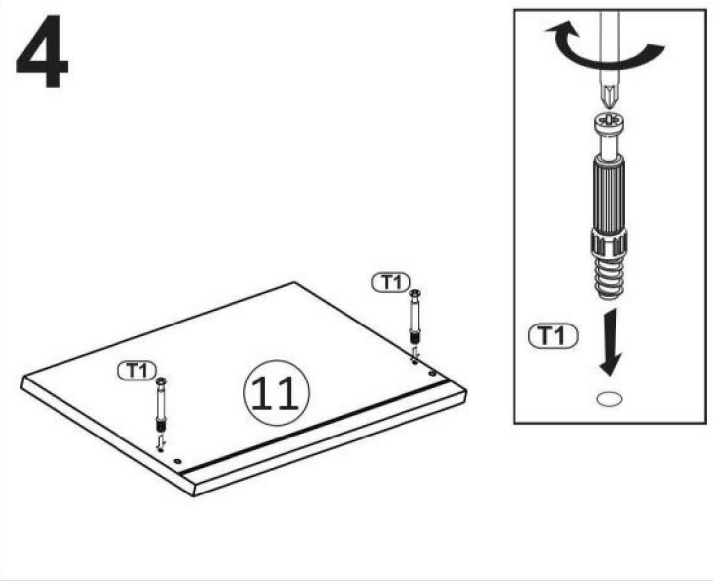


10 **11**

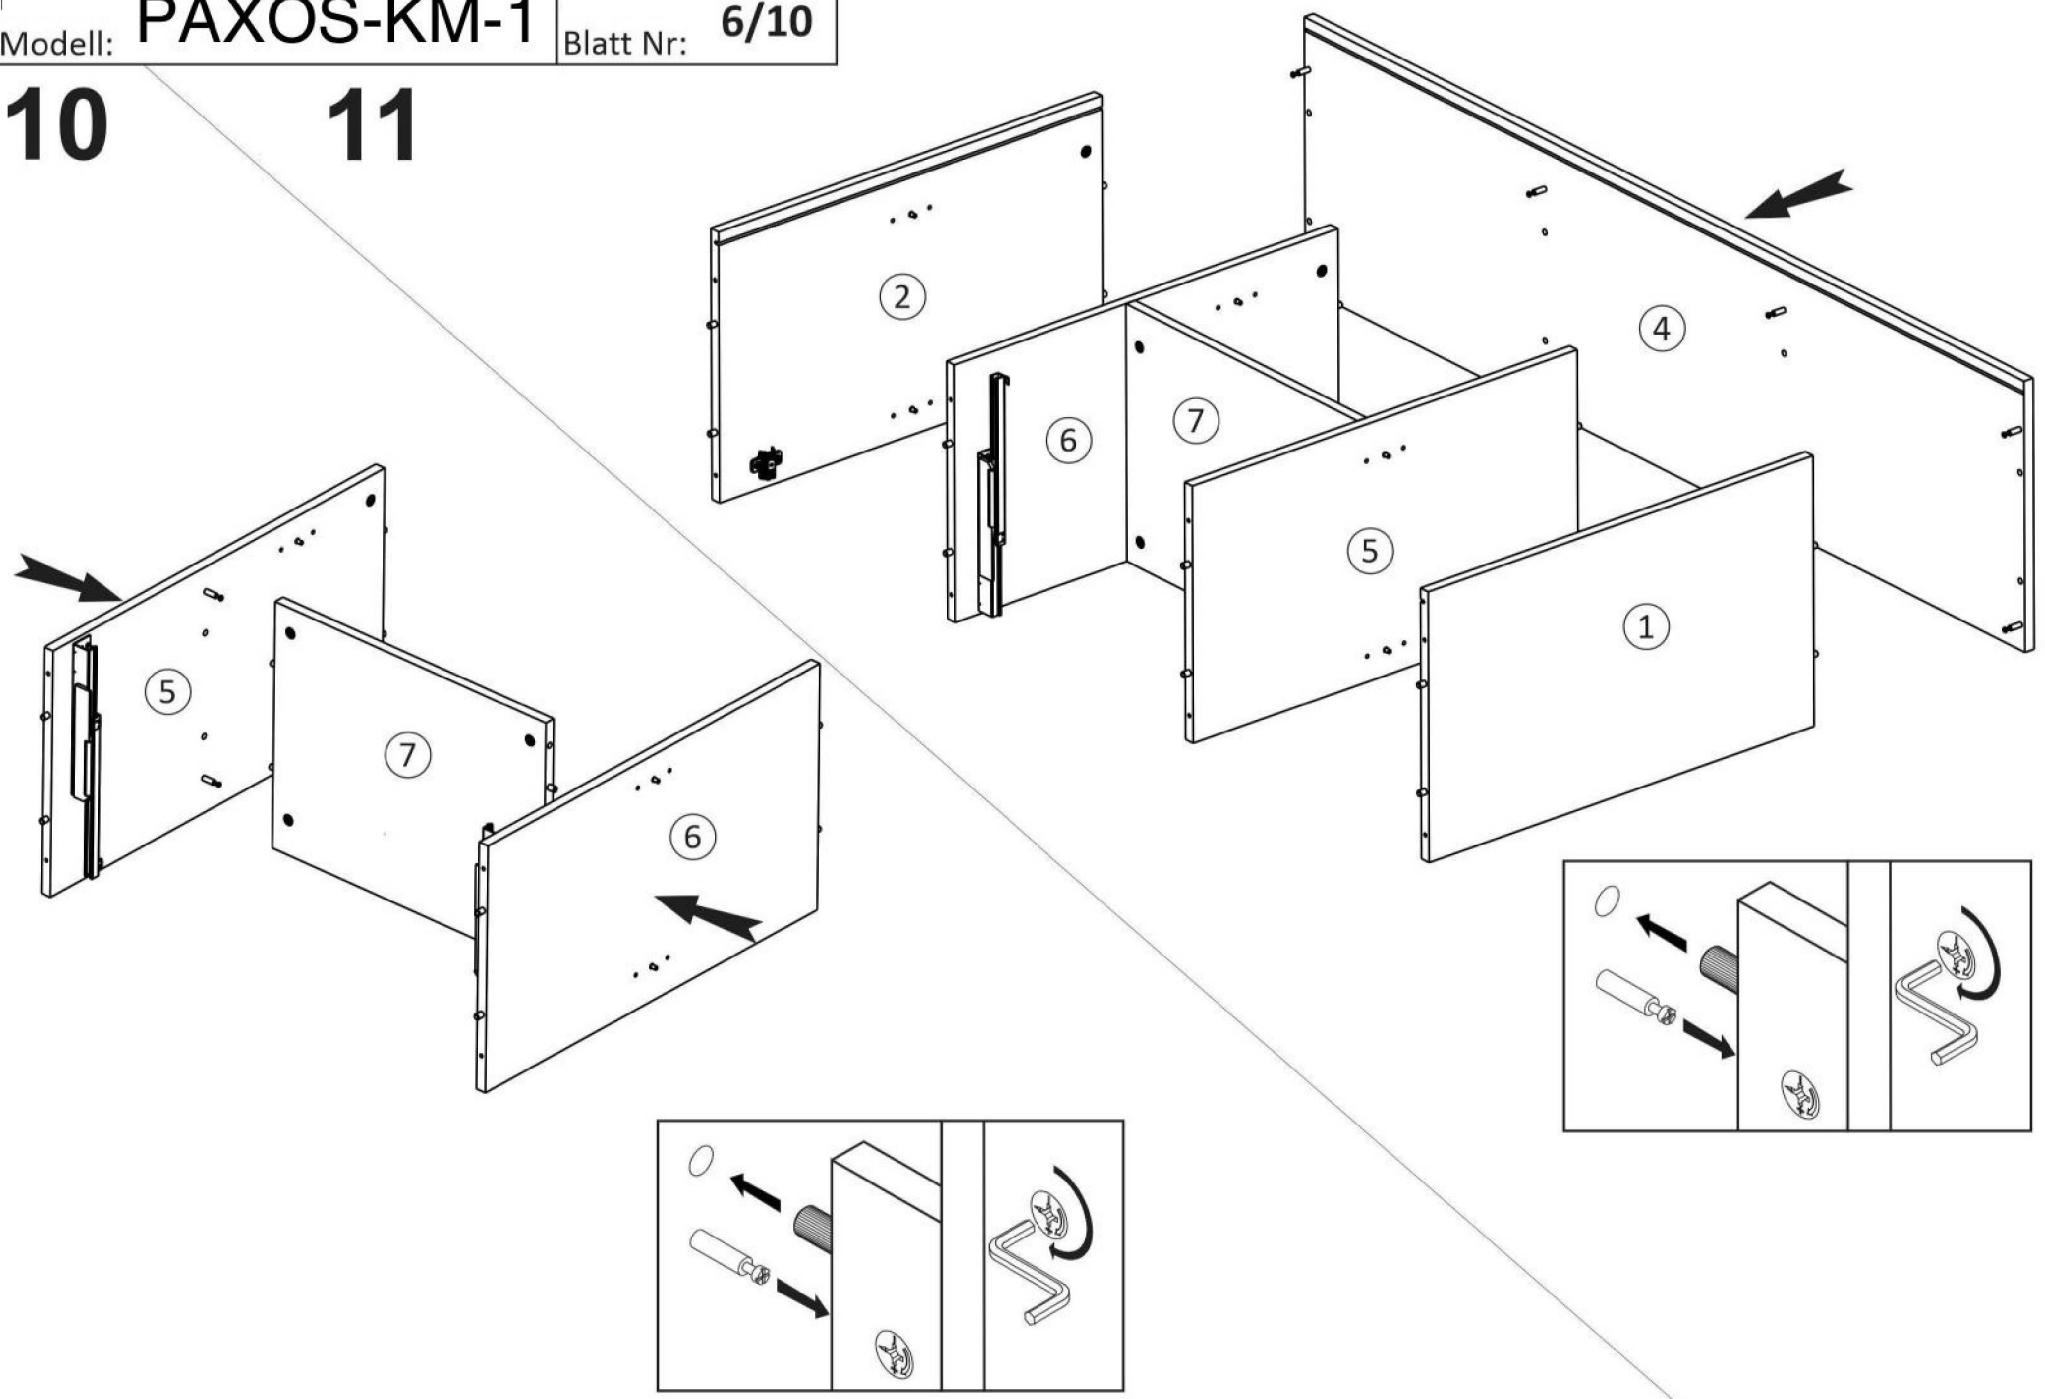


12

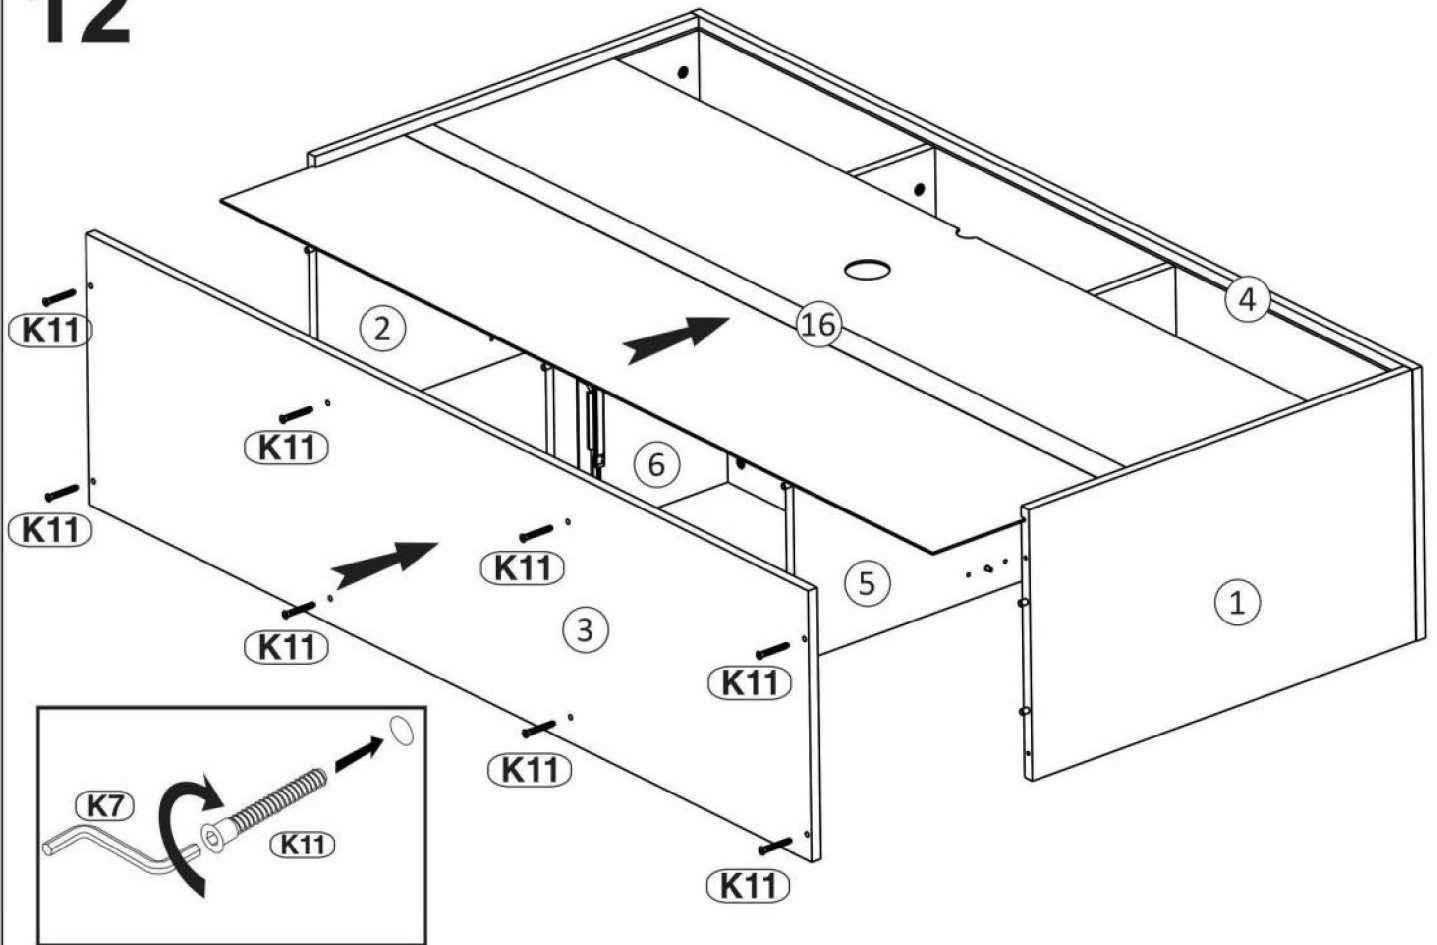


13

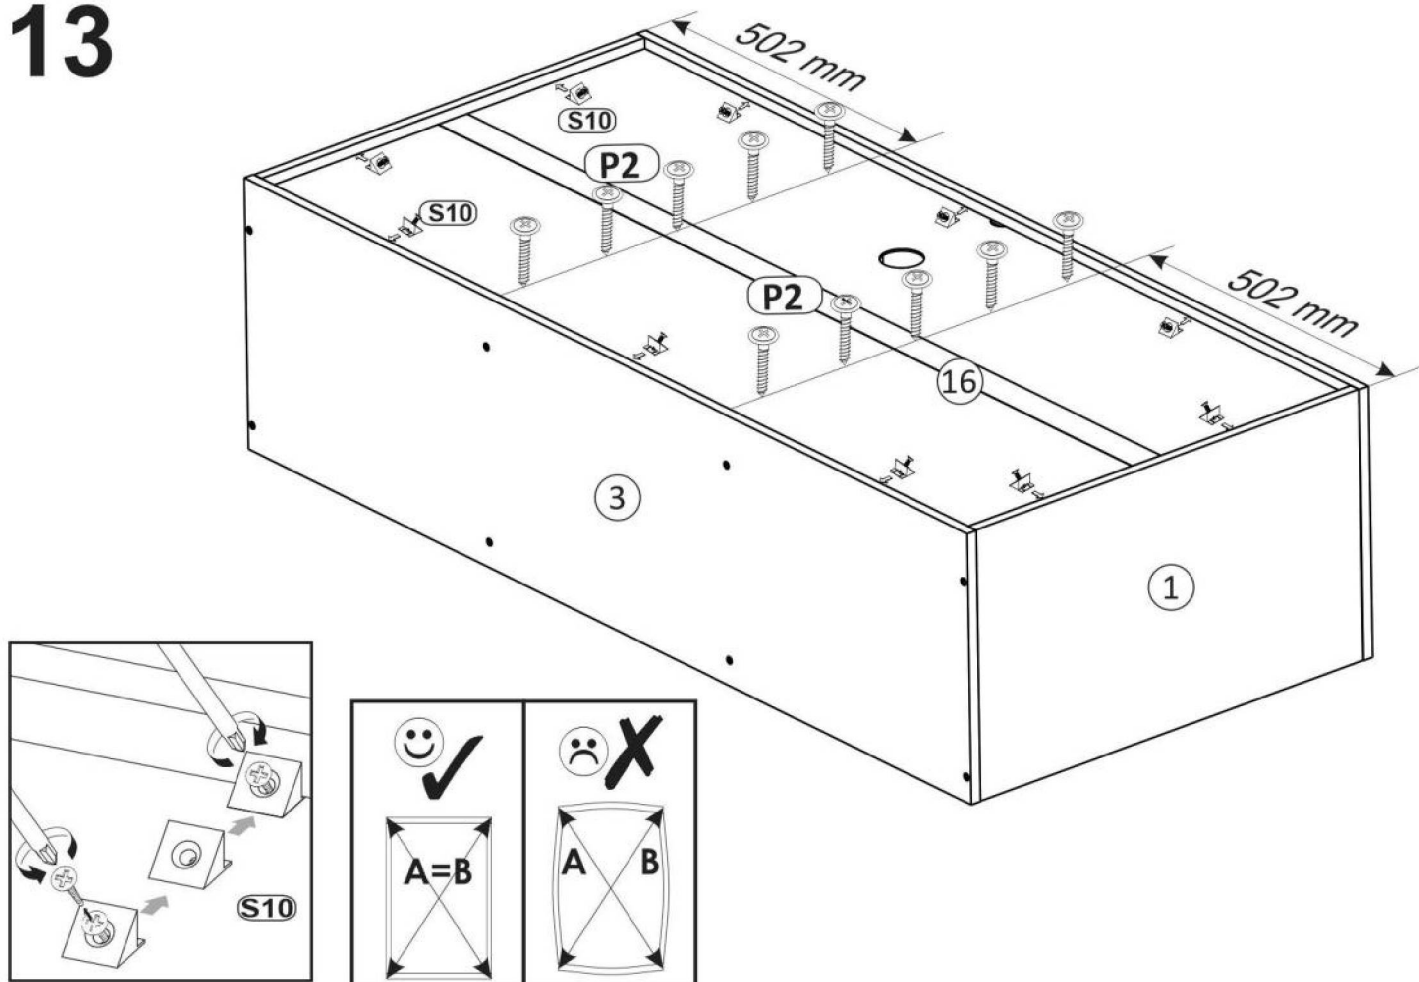





14

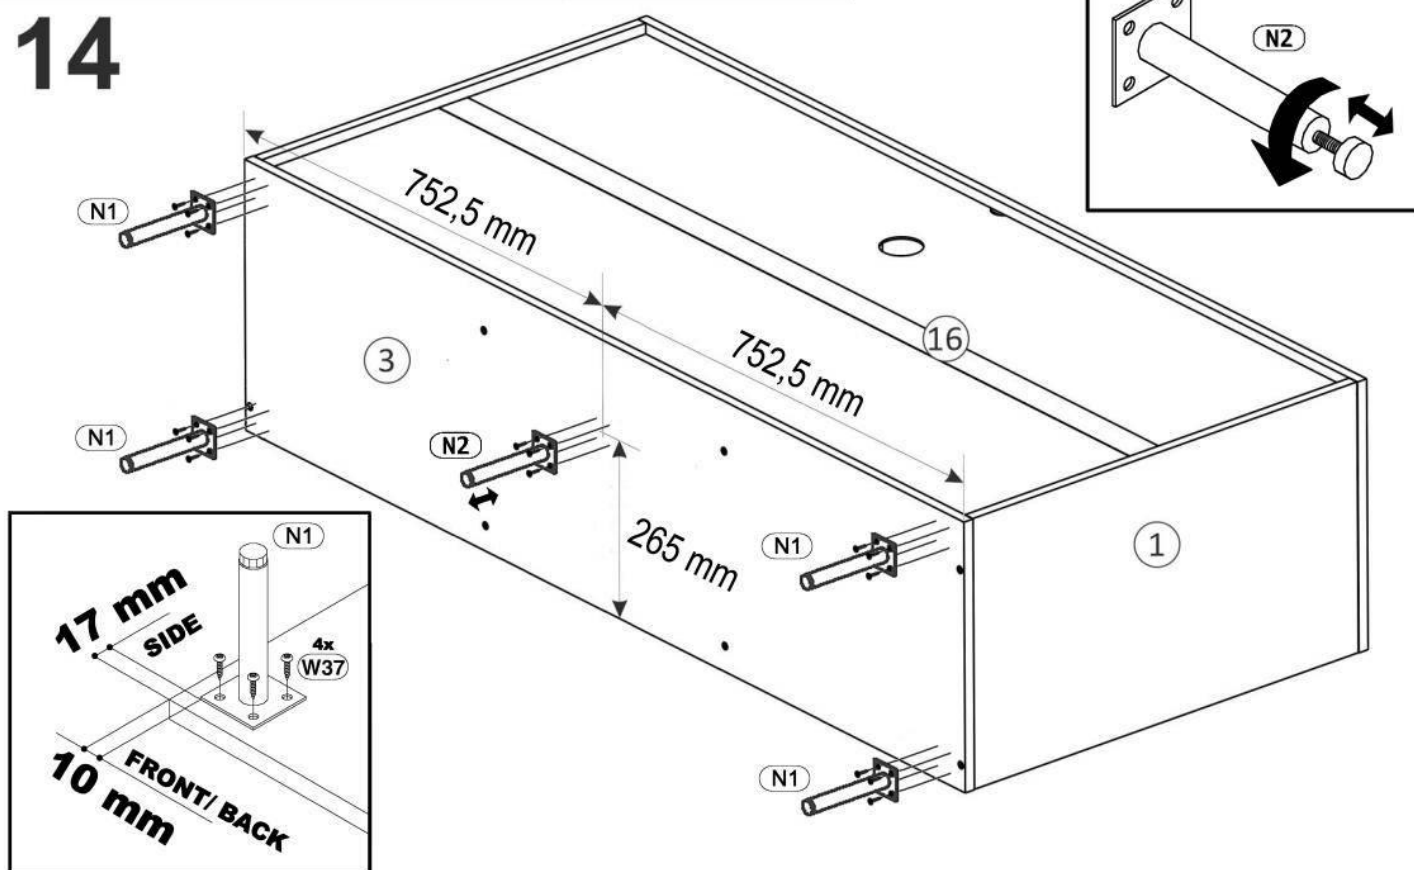

15

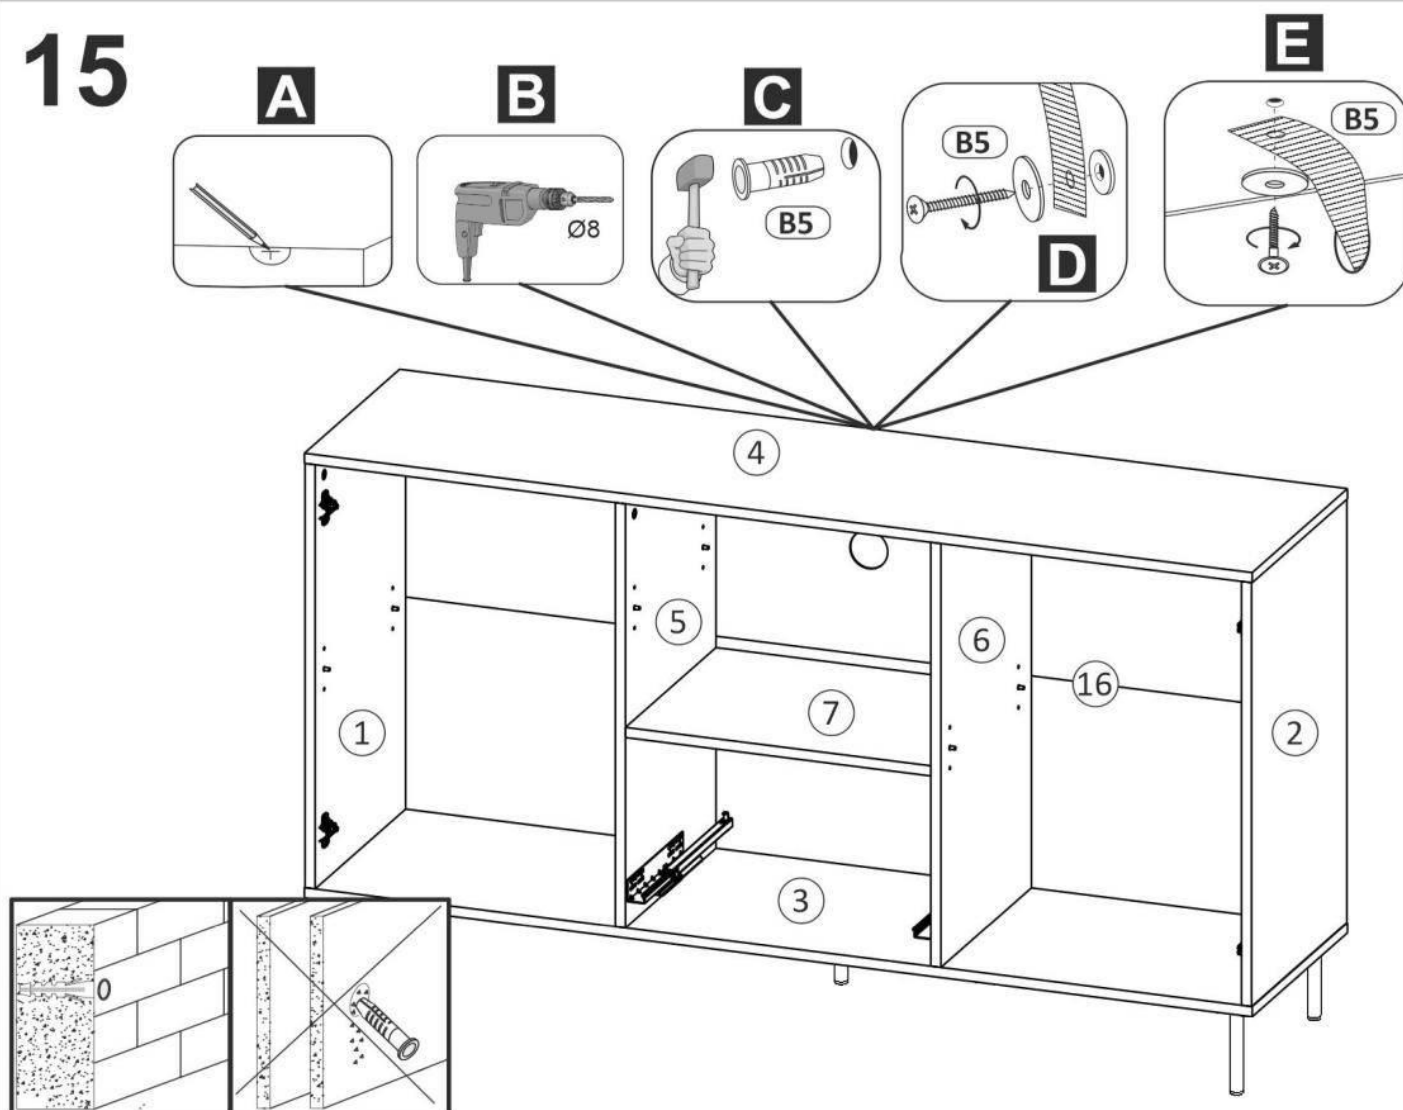

16

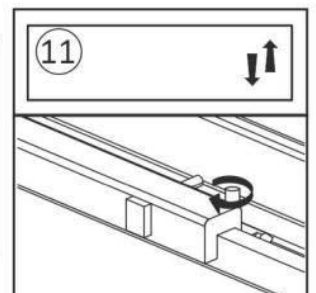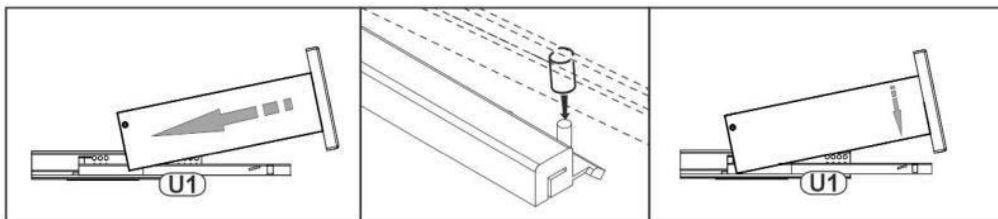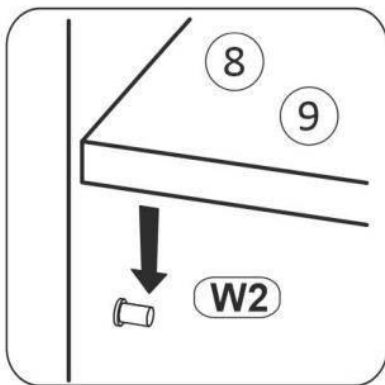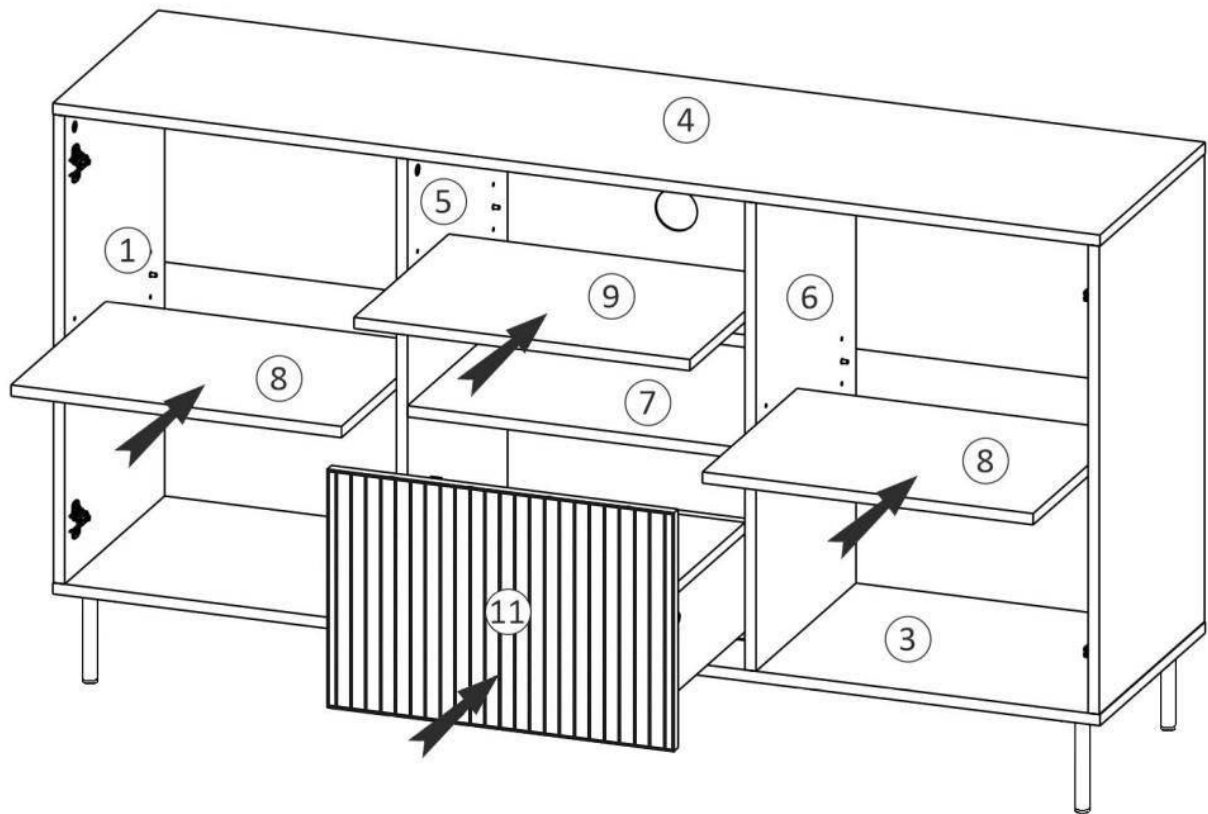

17

