
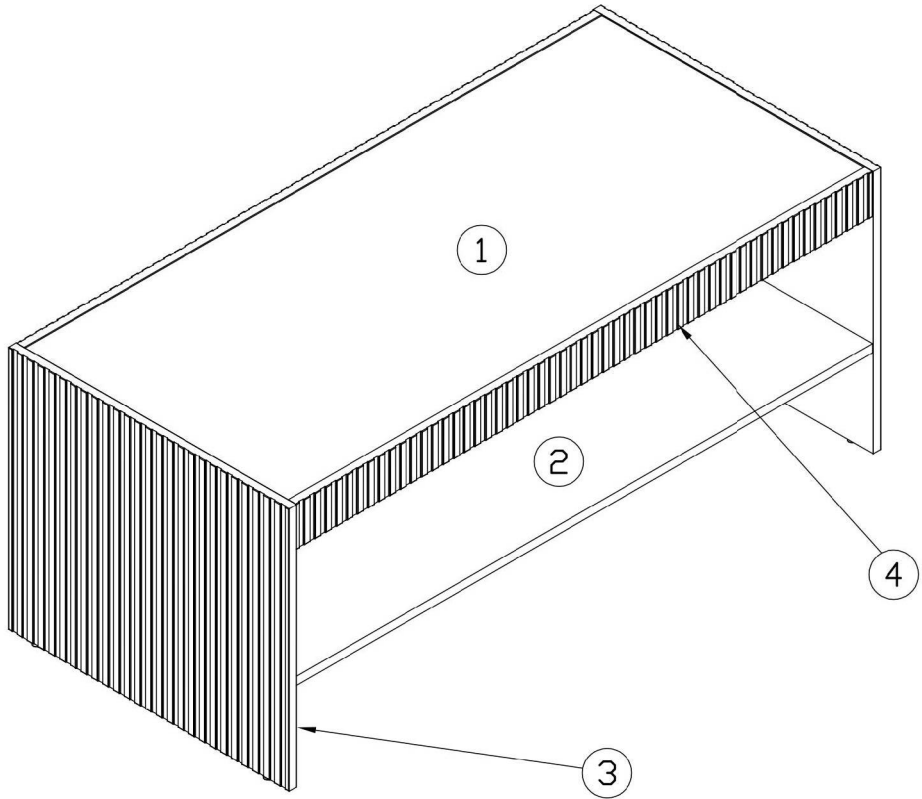




Modell: **PAXOS-LAW-1** | Blatt Nr: **1/4**

Do montaży
potrzebne są:
Für die Montage
dieser Type
benötigen Sie:

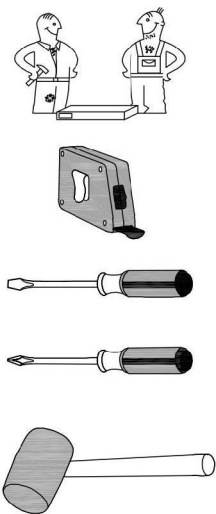


REP	DIM			QTY	PACKAGE
1	1168	534	16	1	1 / 1
2	1168	566	16	1	1 / 1
3	568	495	16	2	1 / 1
4	1168	80	16	2	1 / 1


BAG 1

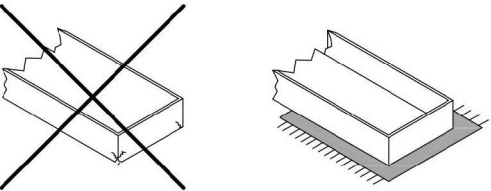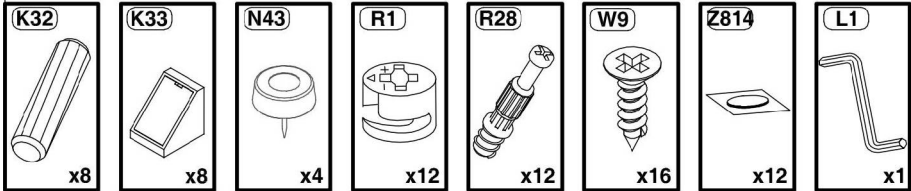


2

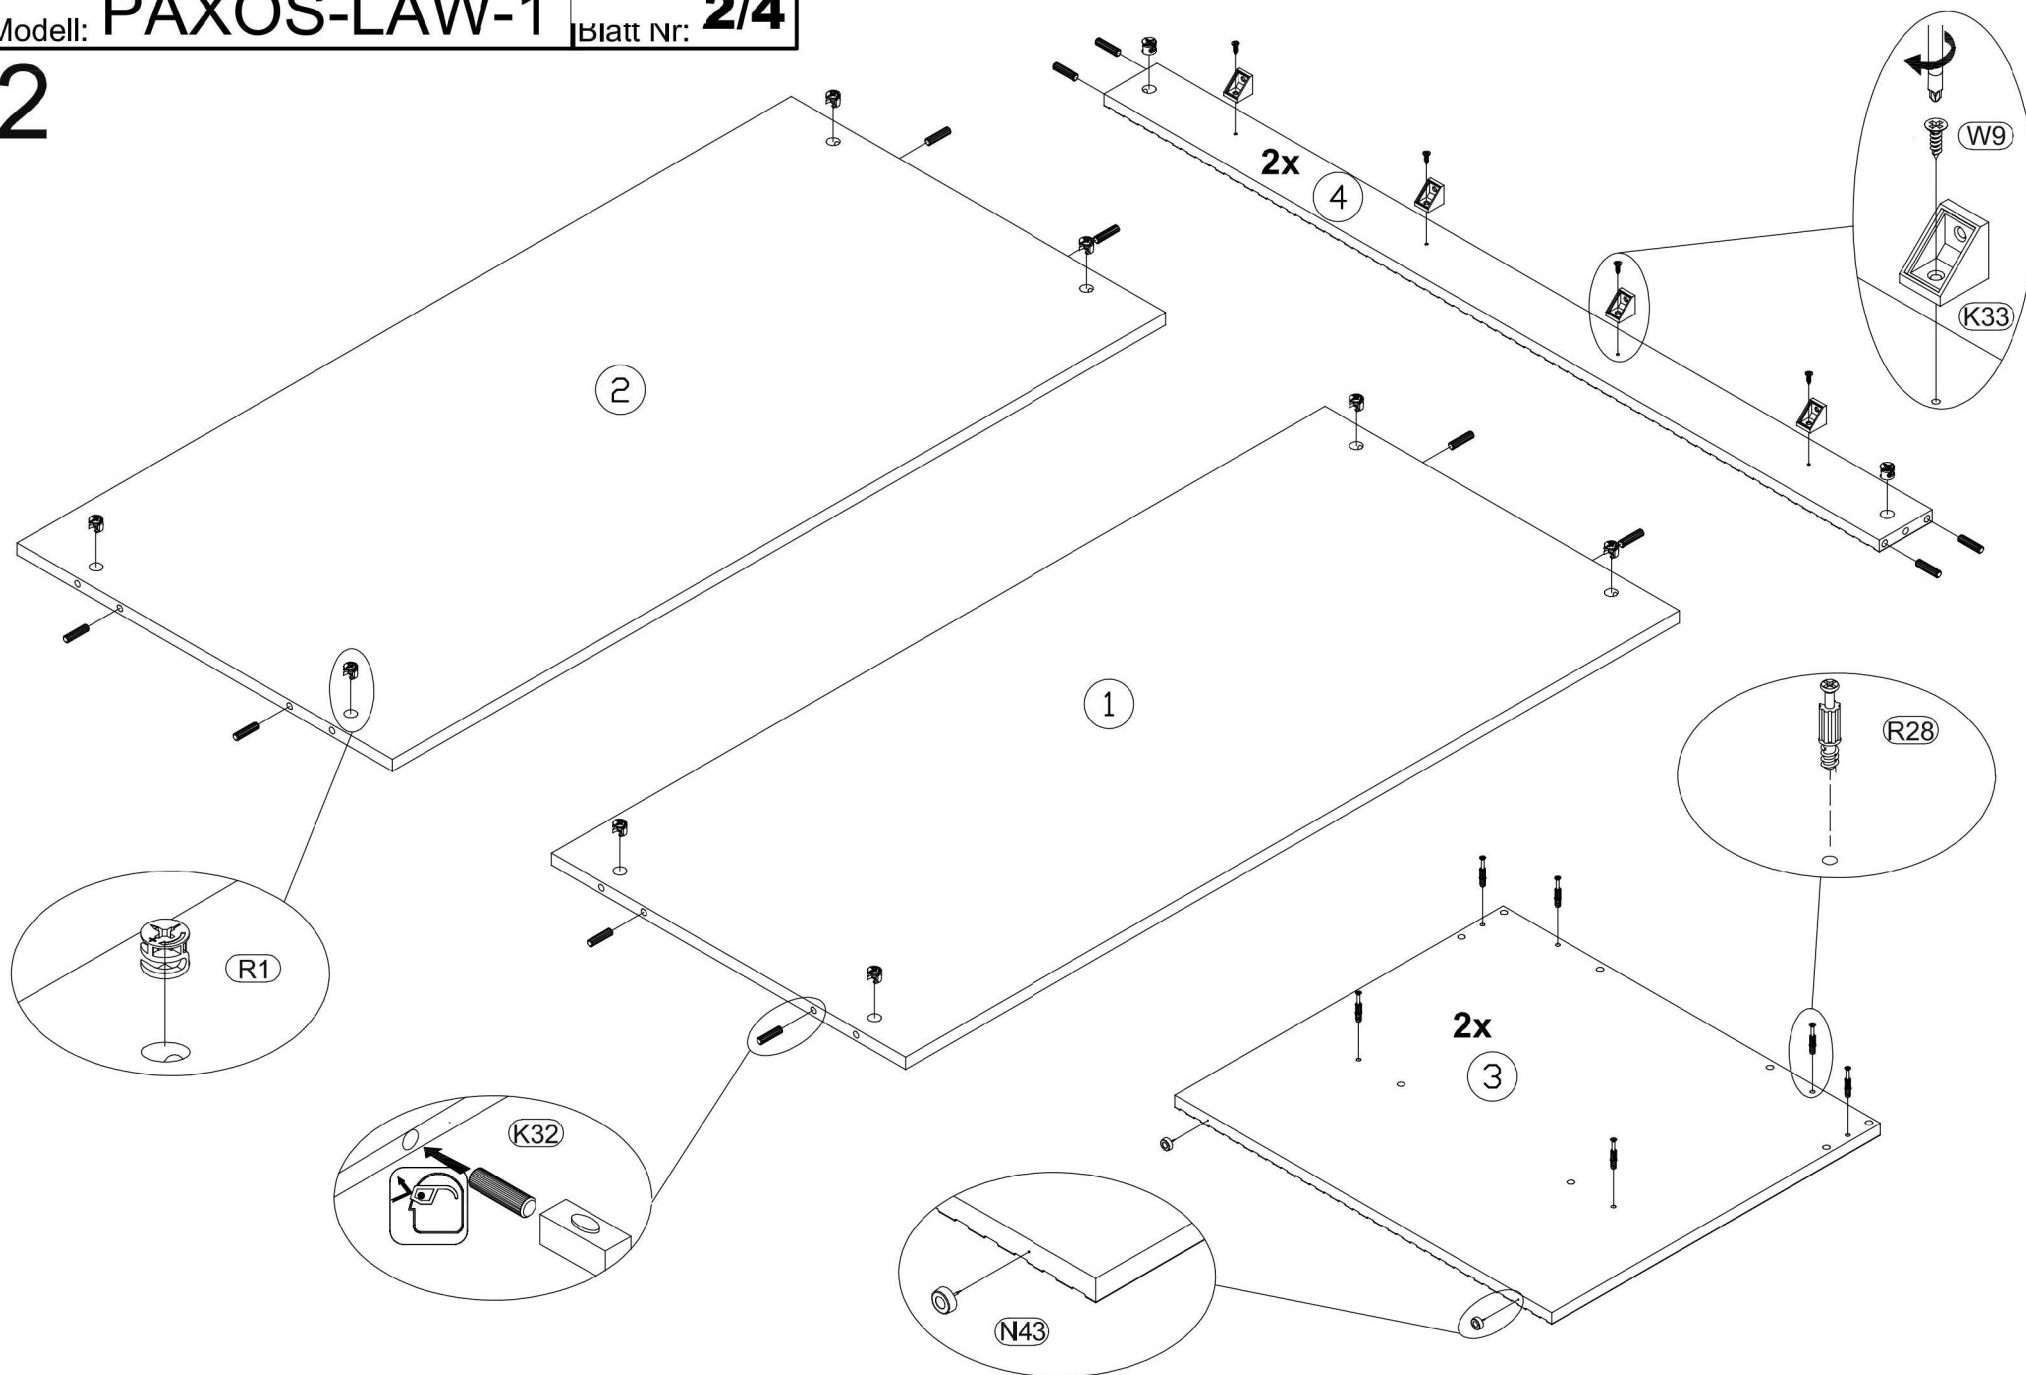


3

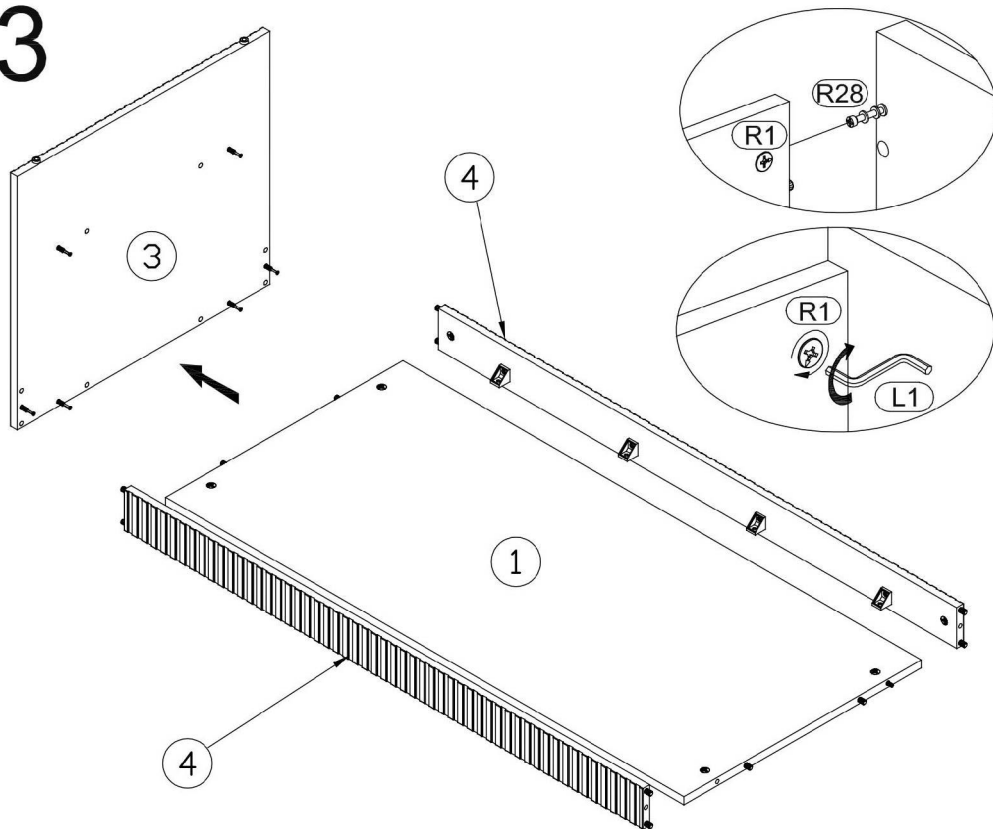


4

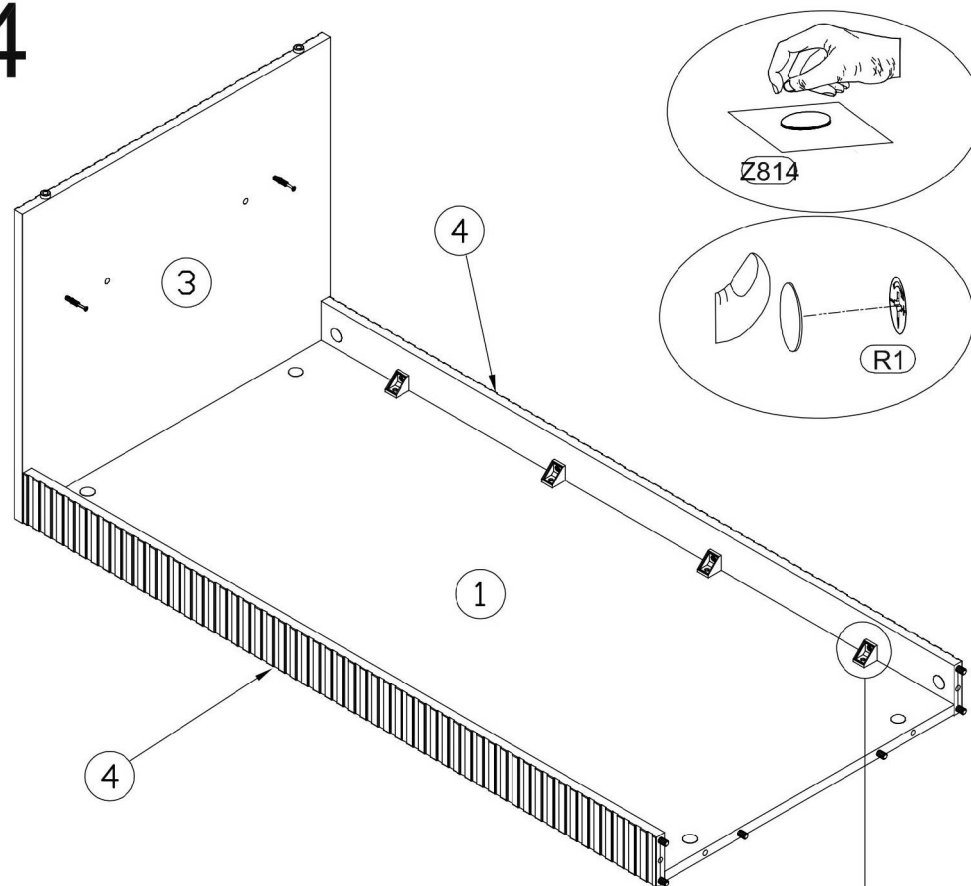


4.1

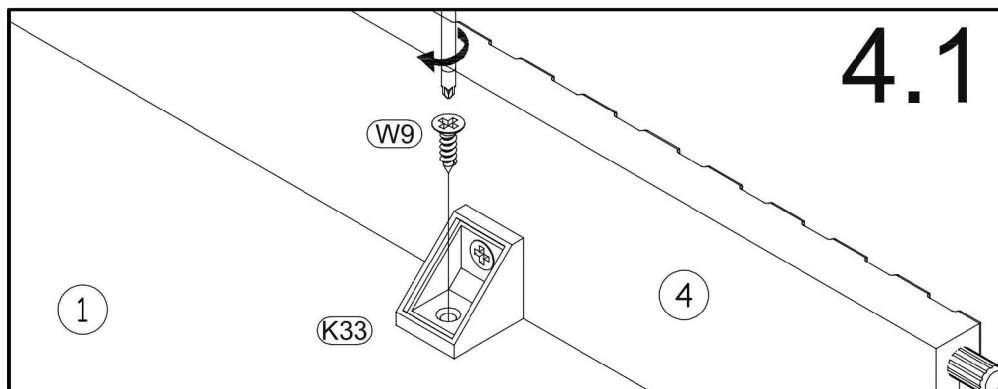

4.2

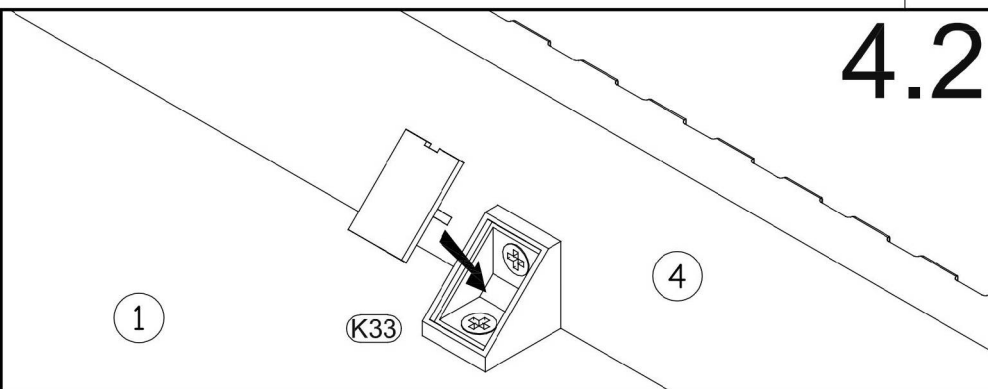

5

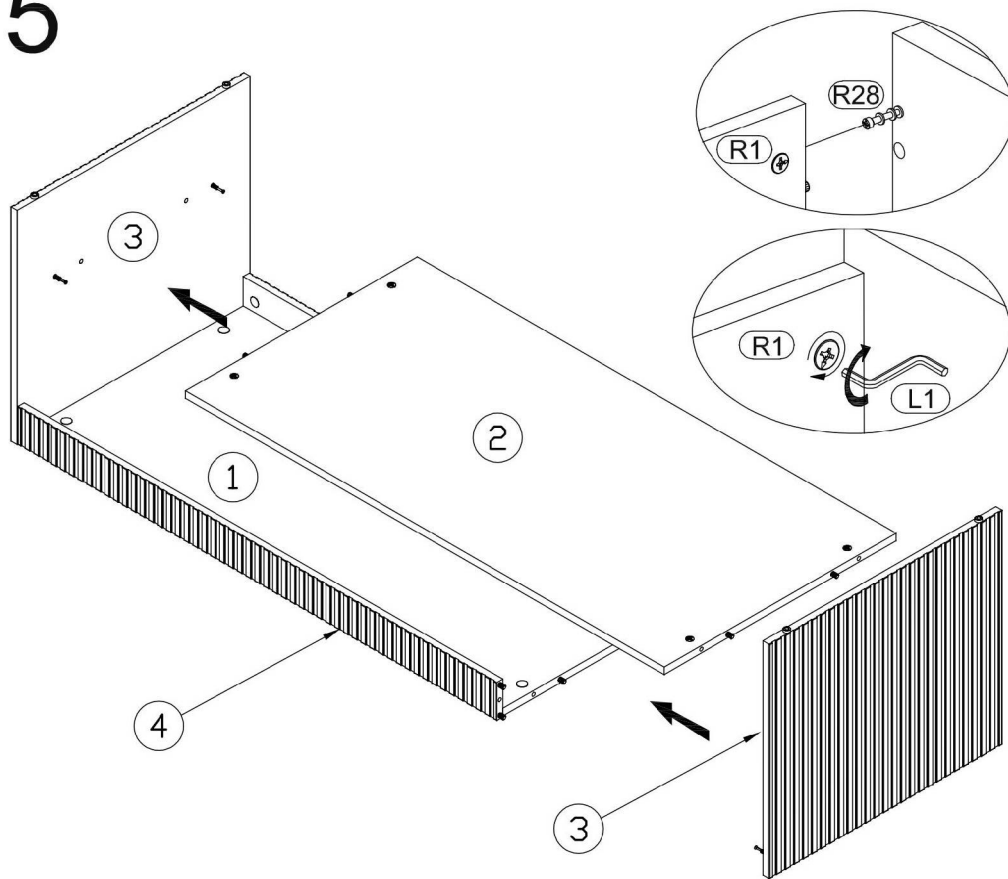

6

