


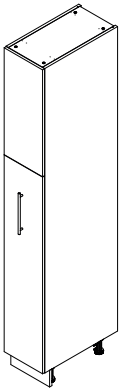
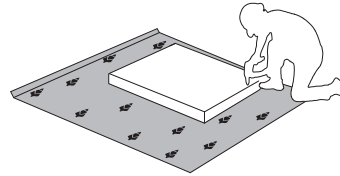



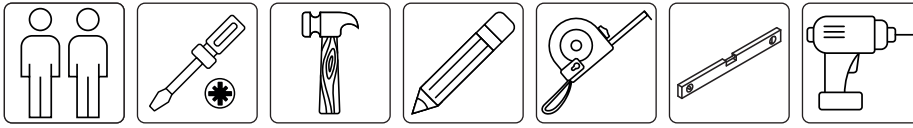


IMPORTANT-READ CAREFULLY-RETAIN FOR FUTURE REFERENCE
WICHTIG-SORGFÄLTIG LESEN UND AUFBEWAHREN

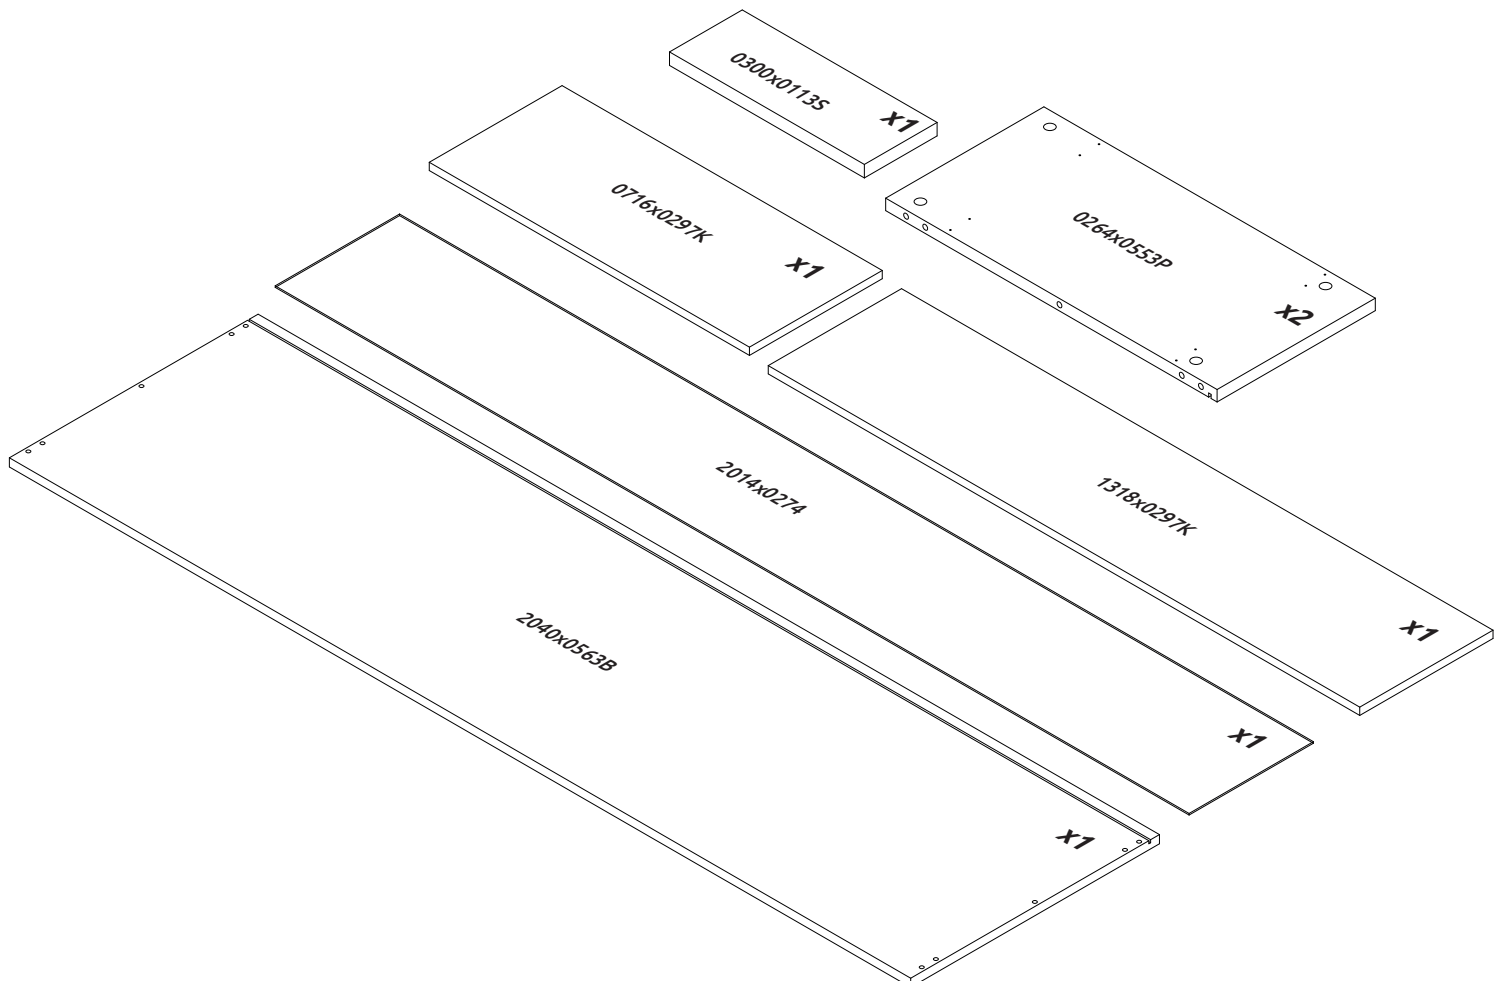


K21-30-1KZ
LHW - 300x2153x600
09.12.2020.

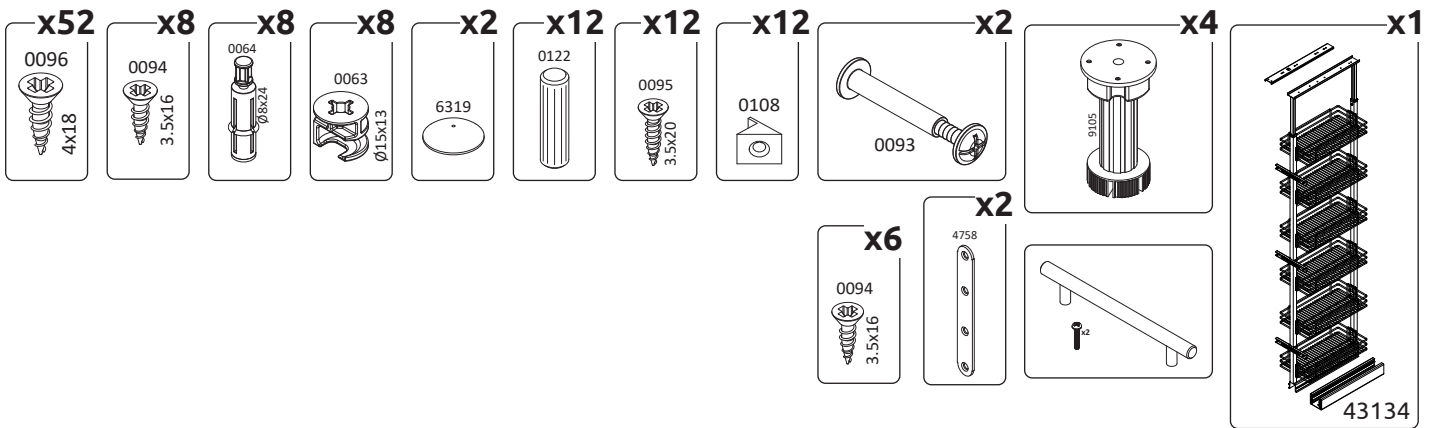

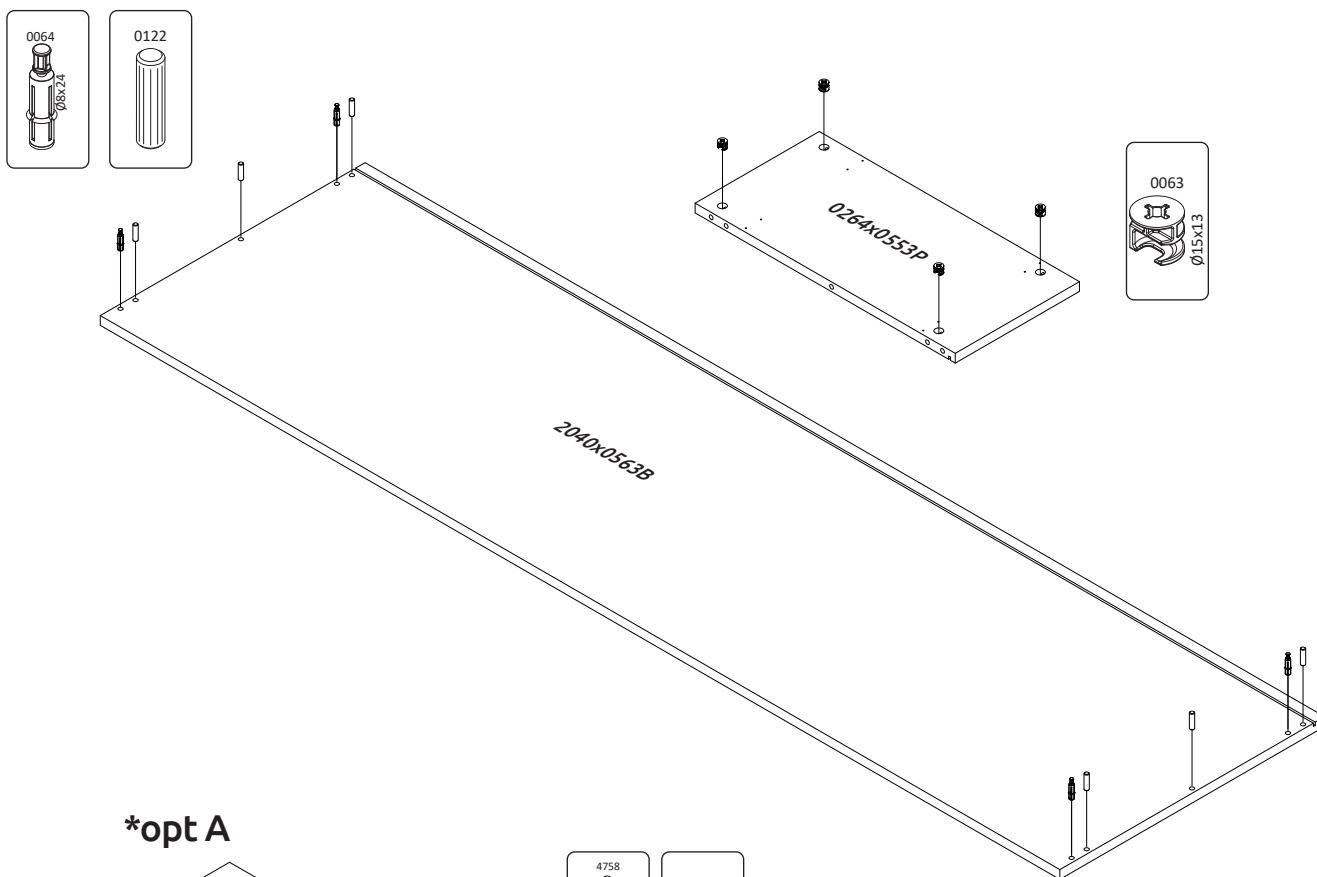

***opt A**

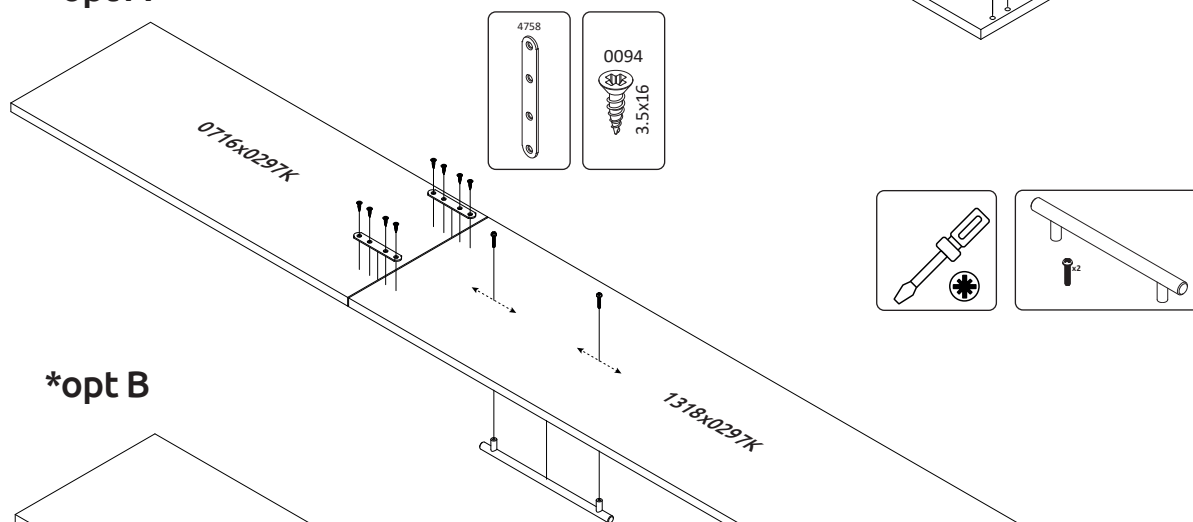

***opt B**







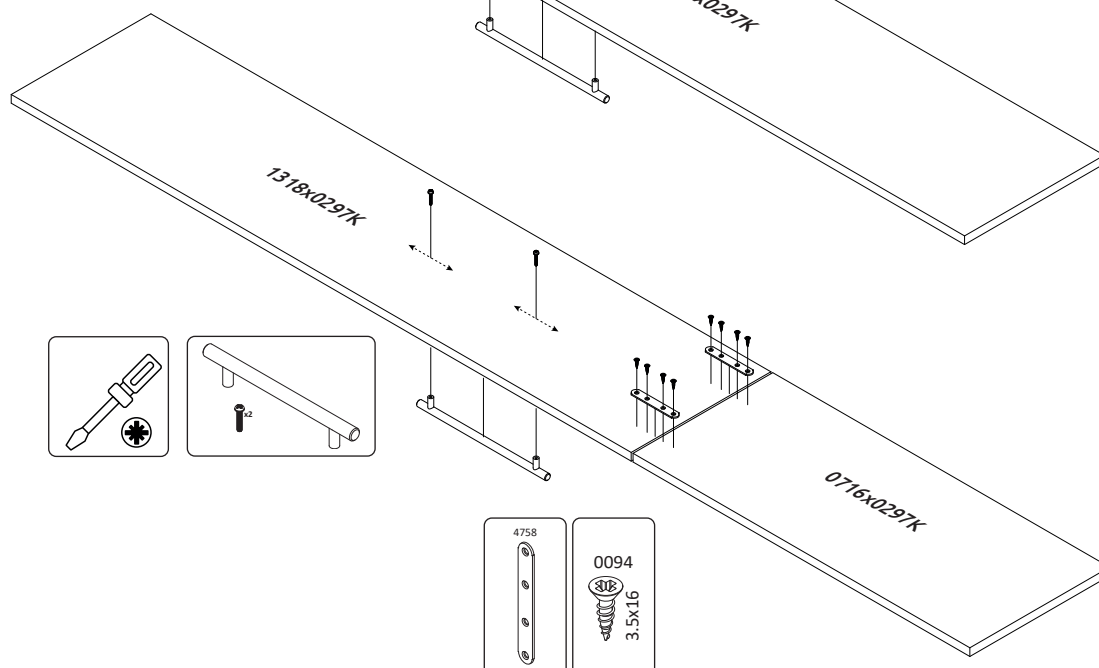


Diagram 1 illustrates the first step of assembly. A large vertical frame is shown. A top panel, labeled "0264x0553P(1)", is being attached to the top of the frame. A callout shows a screw being inserted into a hole in the panel. A bottom panel, labeled "0264x0553P(2)", is shown at the base of the frame, ready to be attached.

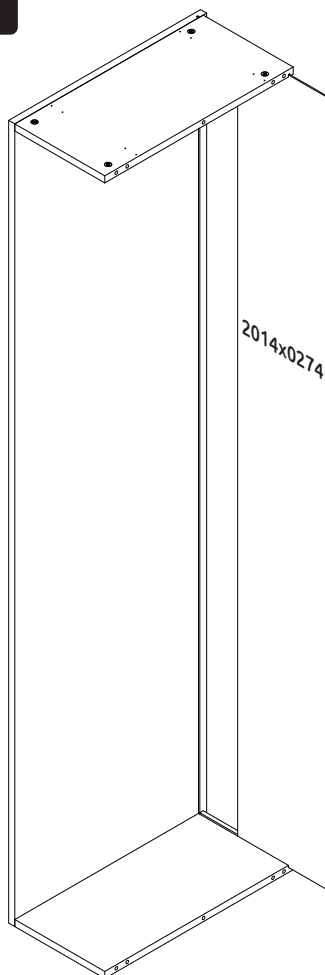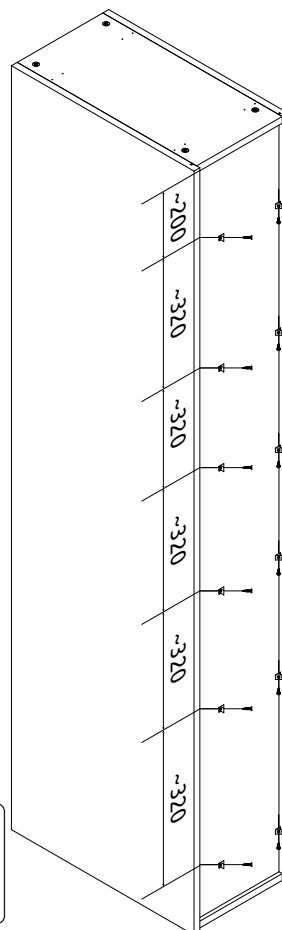

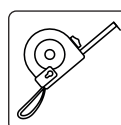


3


2040x00563B(2)

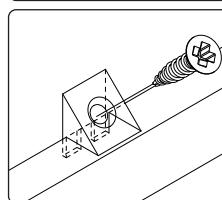




5

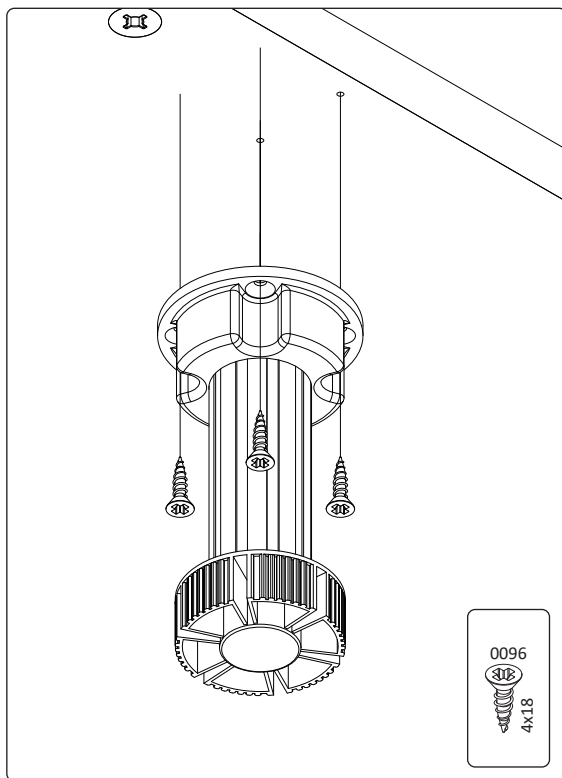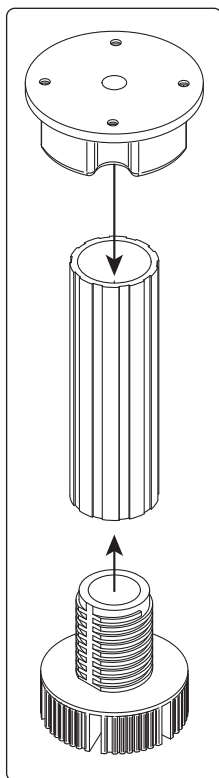


6

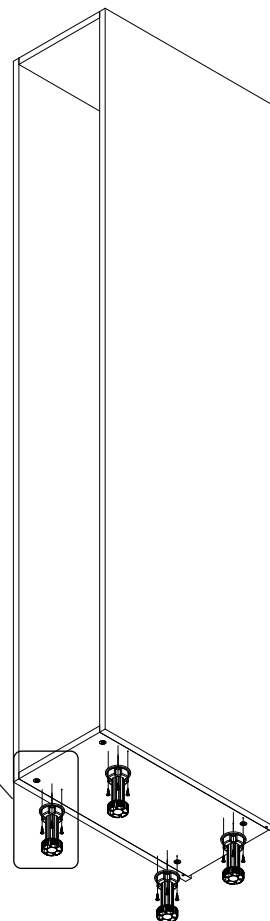





7

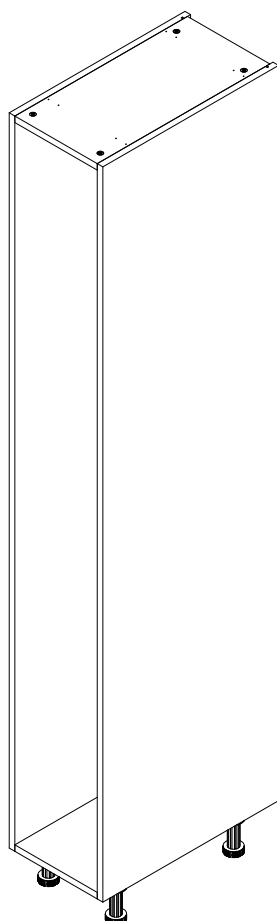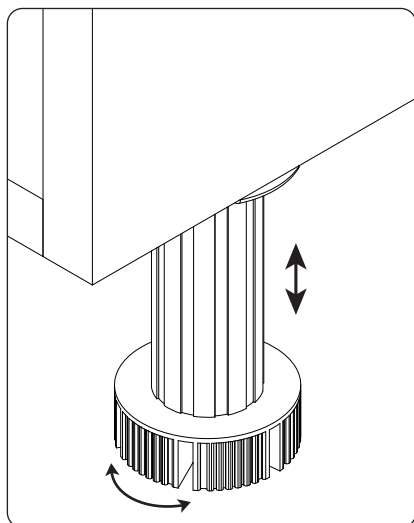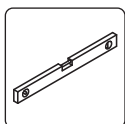

8

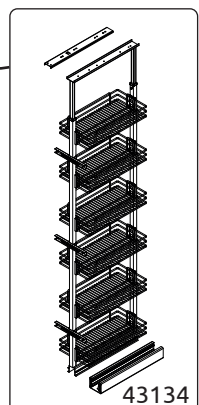



9

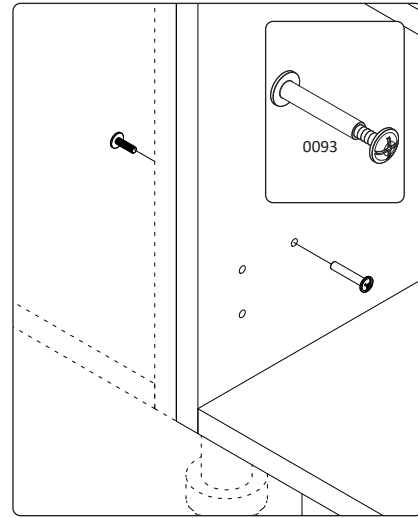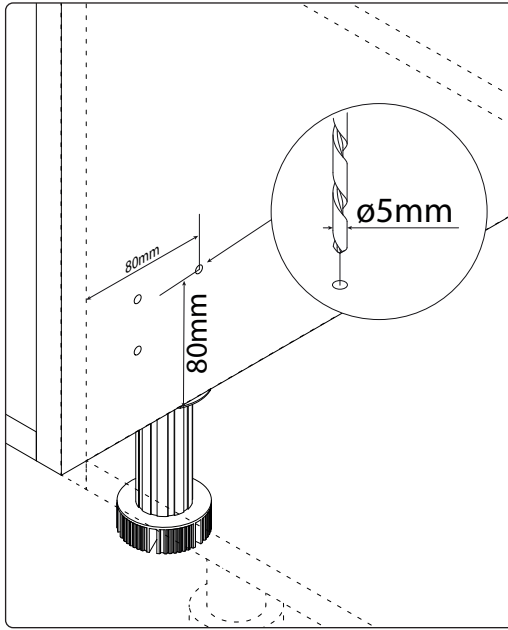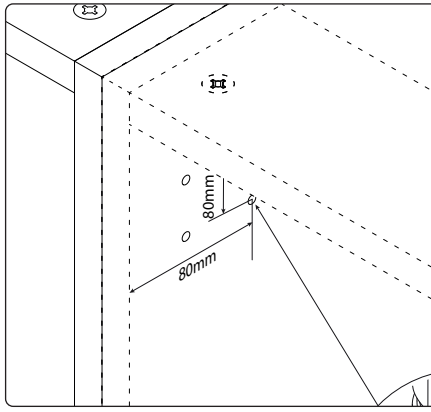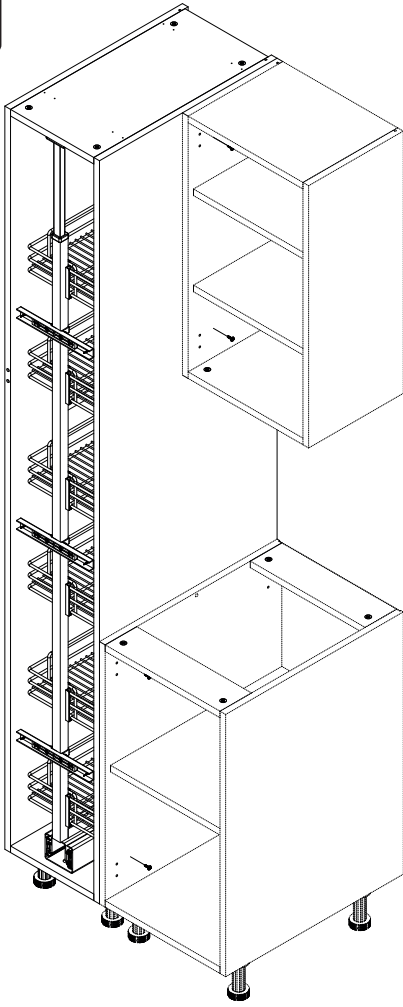


10



*opt TA, EG

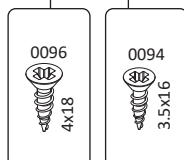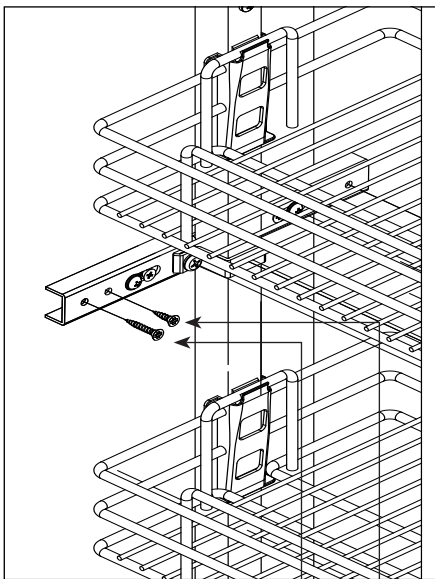

*opt A

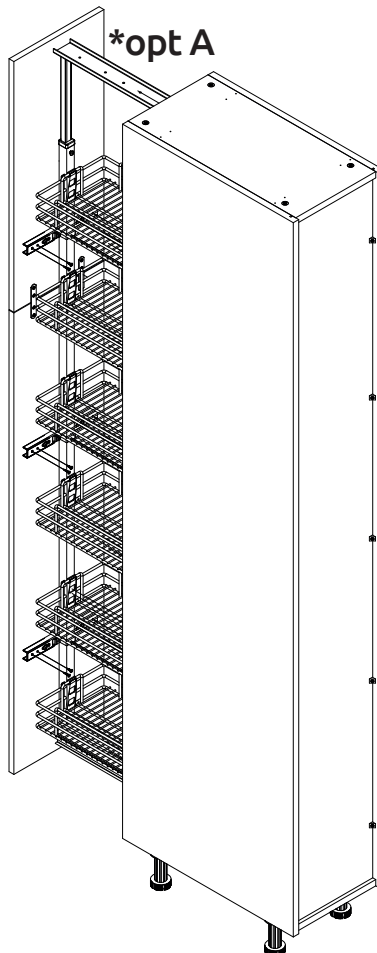

*opt B

