


IMPORTANT – READ CAREFULLY – RETAIN FOR FUTURE REFERENCE
WICHTIG – SORGFÄLTIG LESEN UND AUFBEWAHREN

Modell: **PAXOS-KM-2** Blatt Nr: **1/8**

Do montažu
potrzebne są:
Für die Montage
dieser Type
benötigen Sie:

Ø8

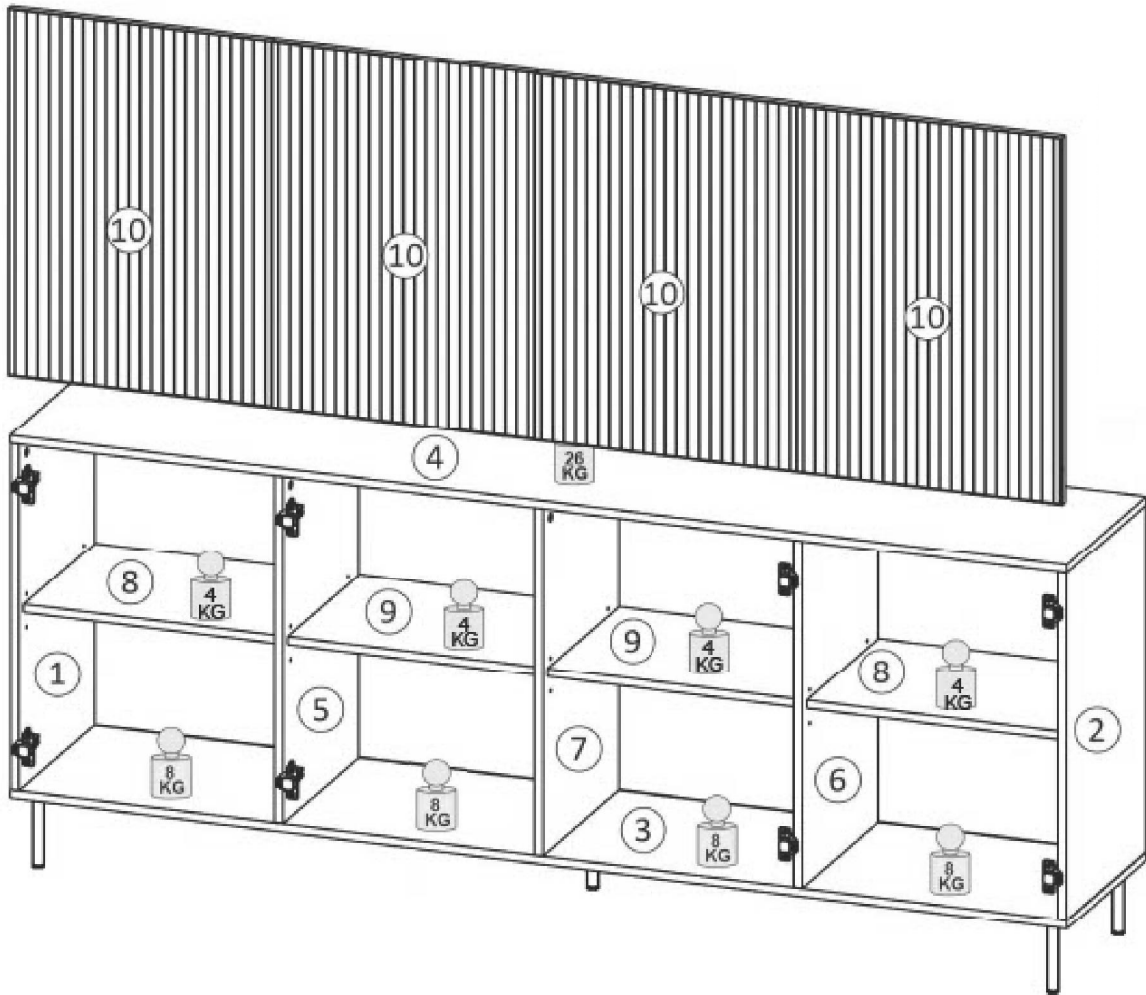

BAG 4

(B5)

x1

BAG 1

(K2)	(T1)	(M1)	(S10)	(P2)	(K7)	(K11)	(W2)	(Z2)
x20	x10	x10	x12	x15	x1	x10	x16	x10

BAG 2









(Z7)	(S3)
x8	x16

BAG 3






(N1)	(N2)	(W37)
x4	x1	x20

REP	DIM			QTY	PACKAGE
1	669	400	16	1	2/2
2	669	400	16	1	2/2
3	2005	400	16	1	1/2
4	2005	400	16	1	1/2
5	669	380	16	1	2/2
6	669	380	16	1	2/2
7	669	380	16	1	2/2
8	483	360	16	2	1/2
9	476	360	16	2	1/2
10	709	498	16	4	2/2
12	1985	341+341	3	1	1/2







1

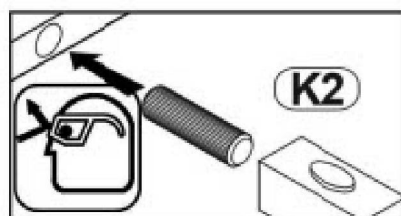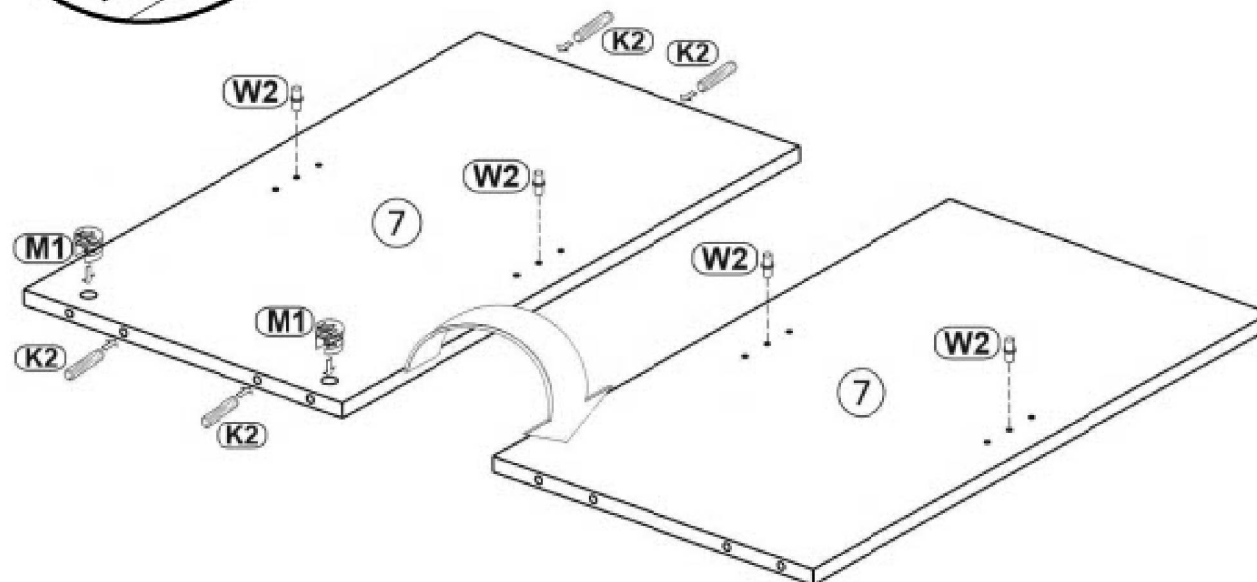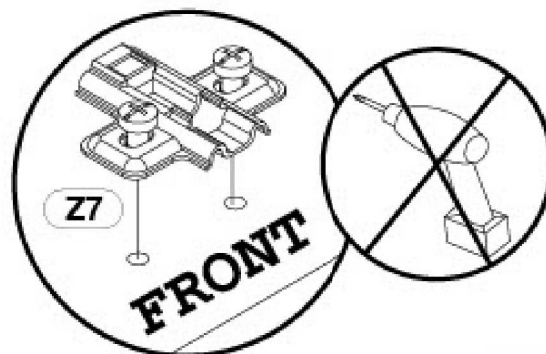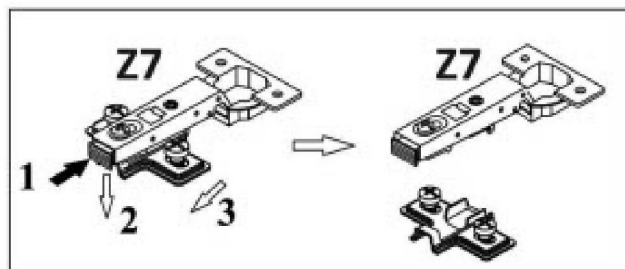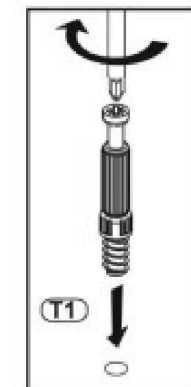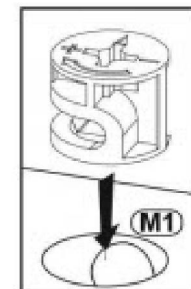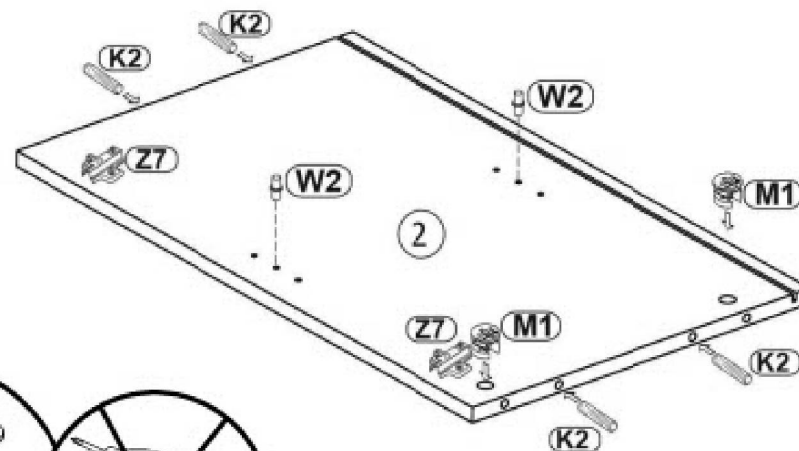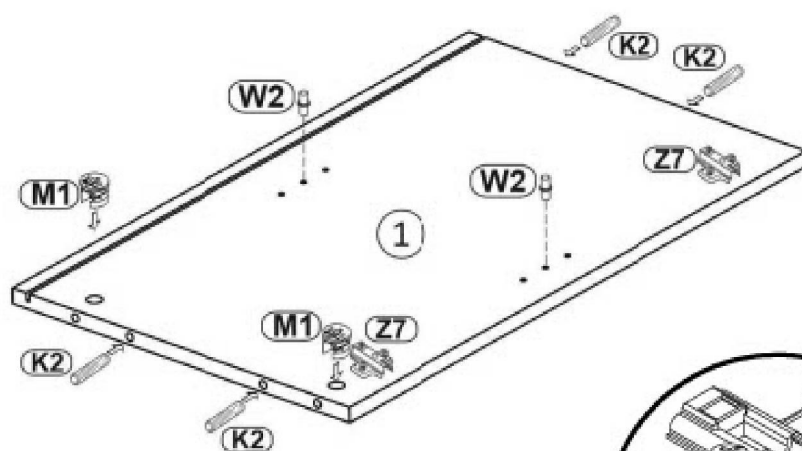



2

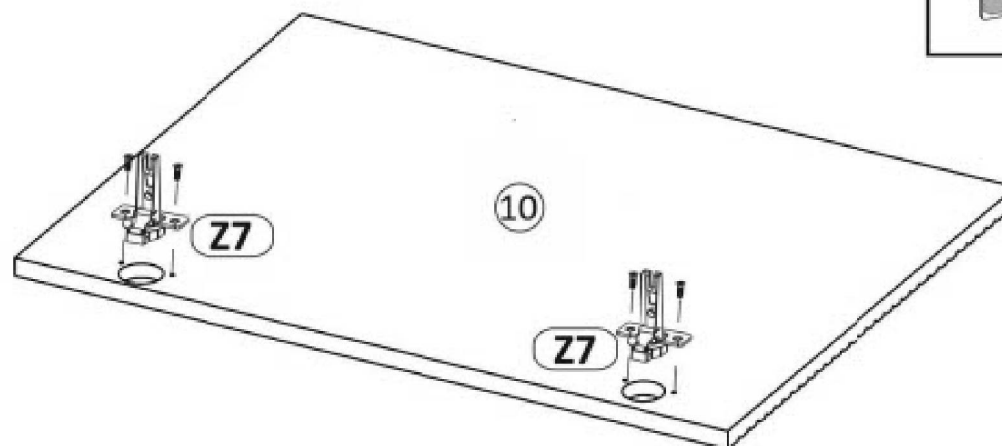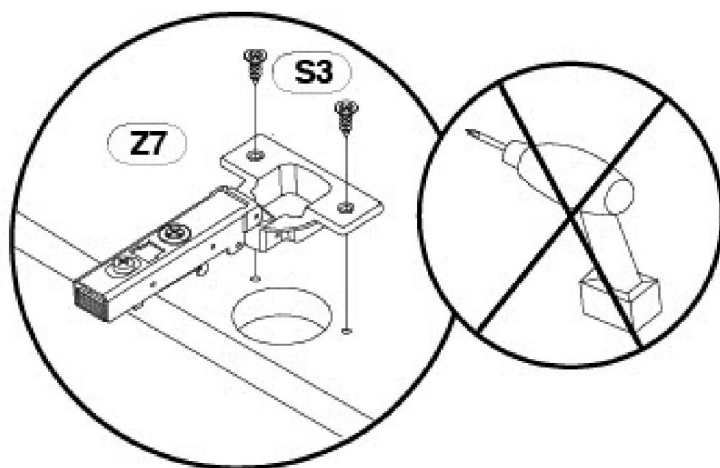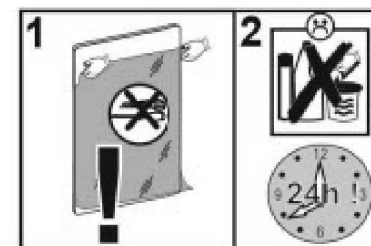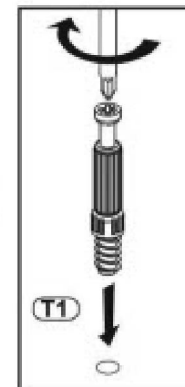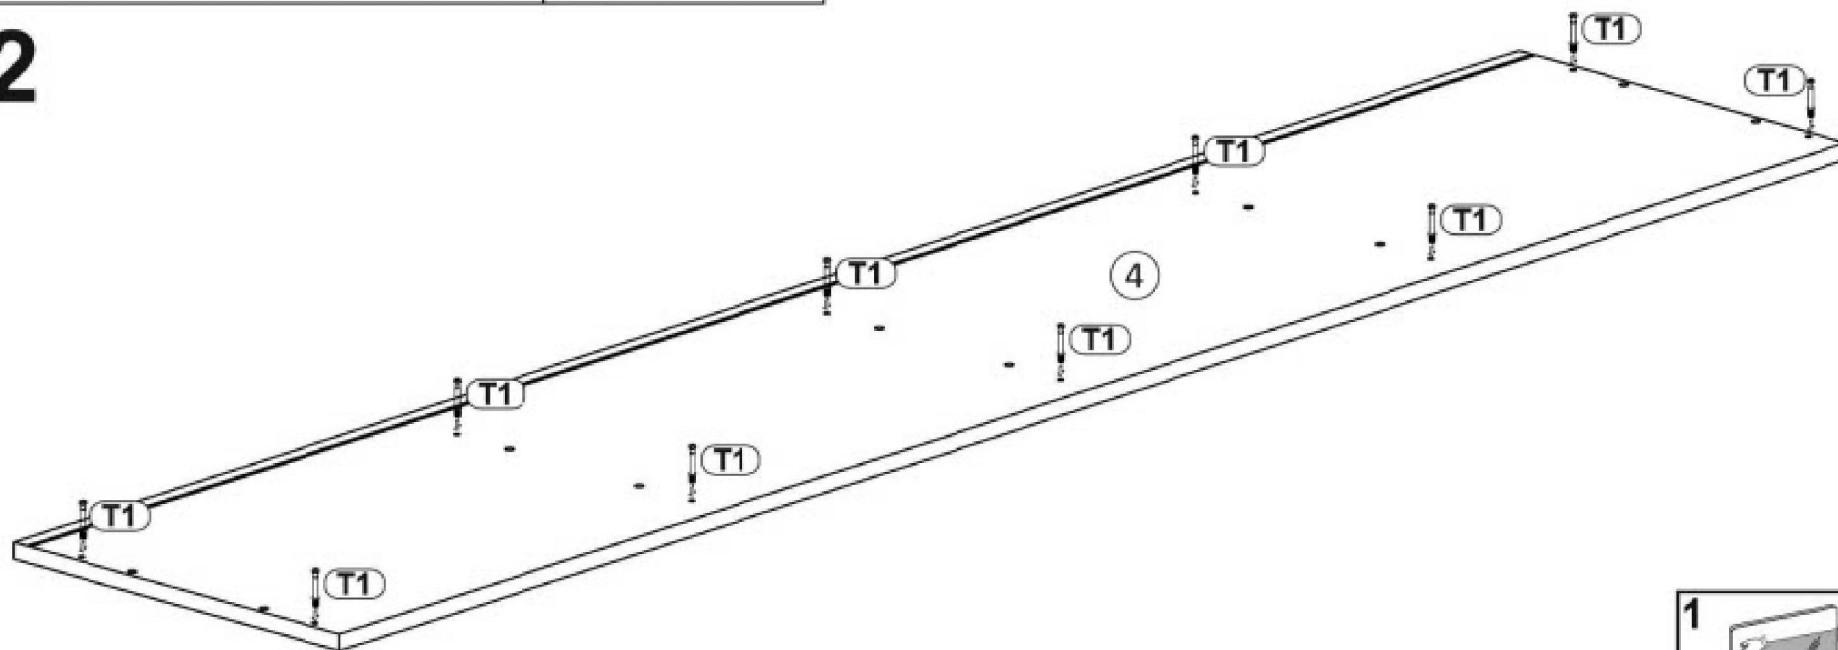



3

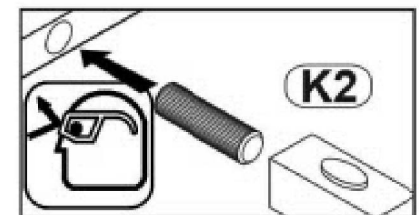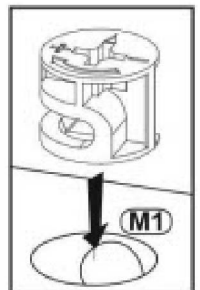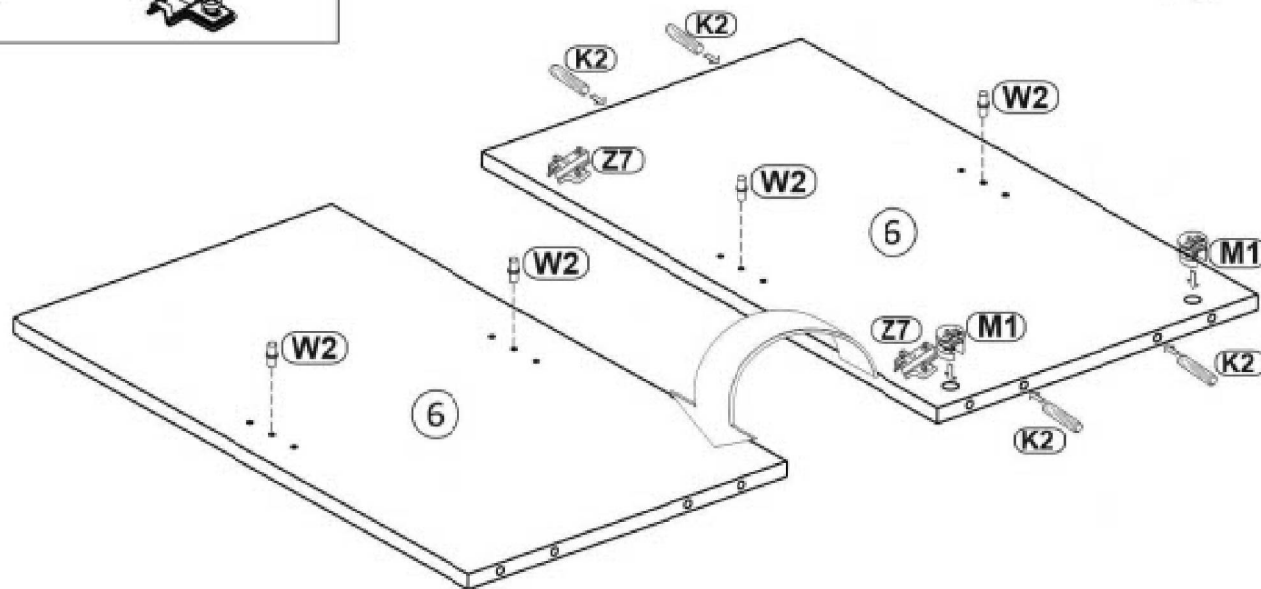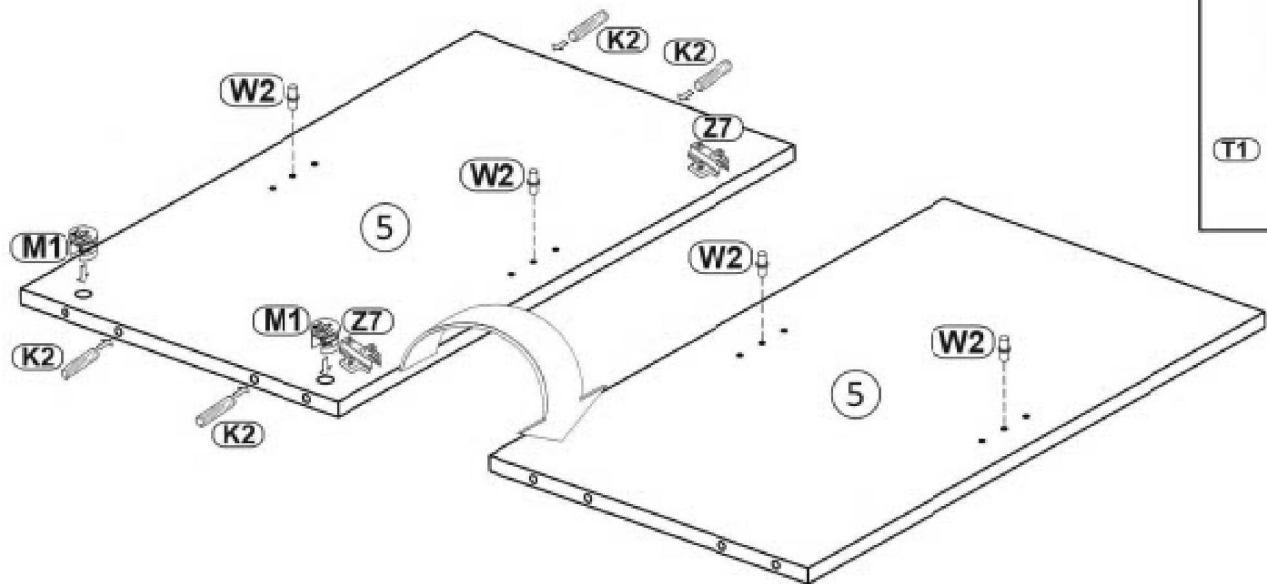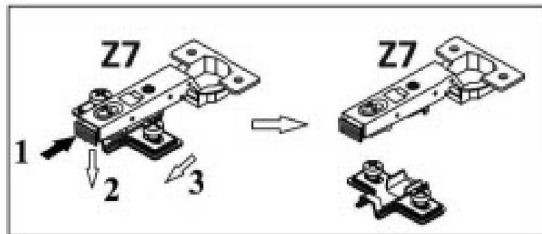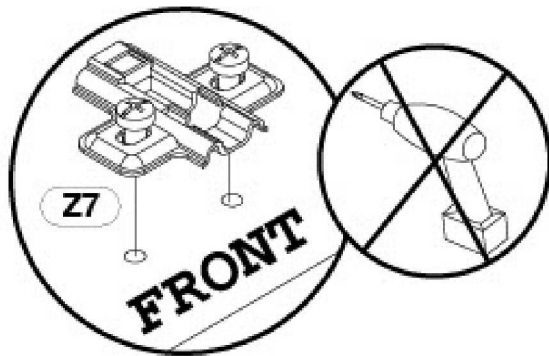




4

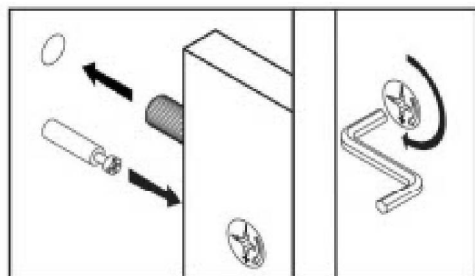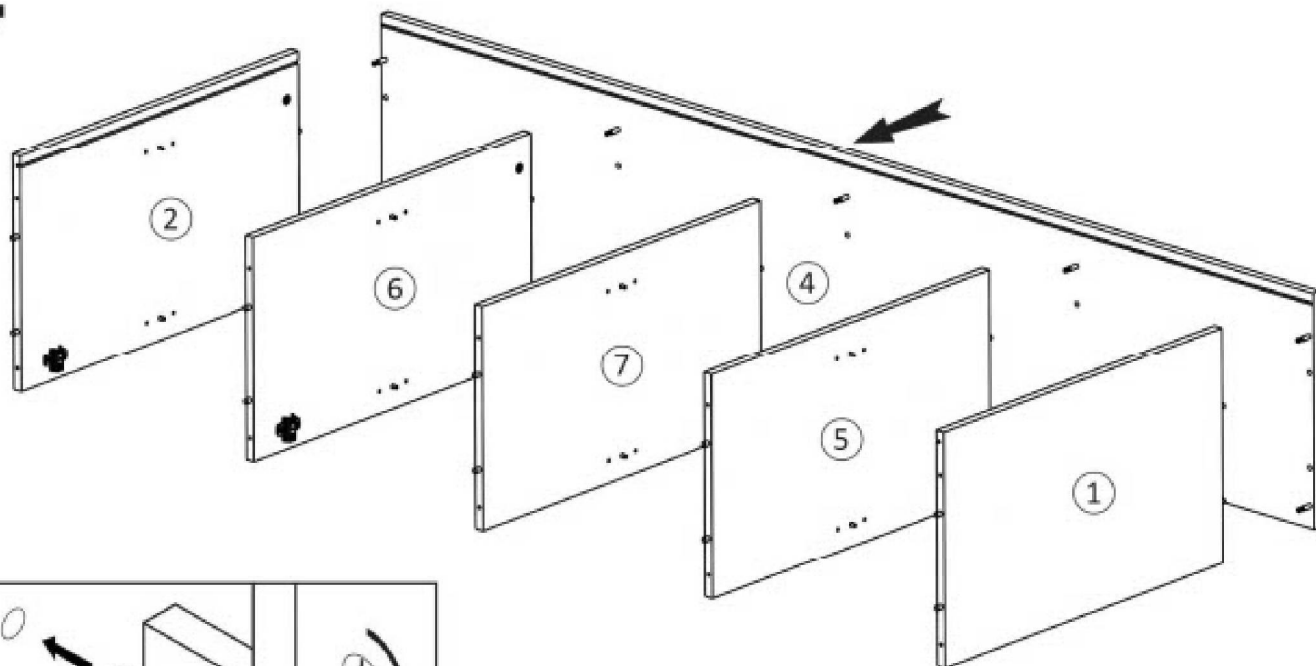




5

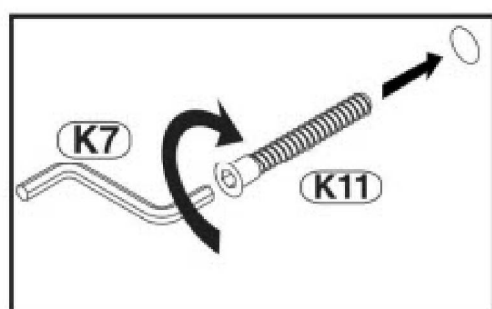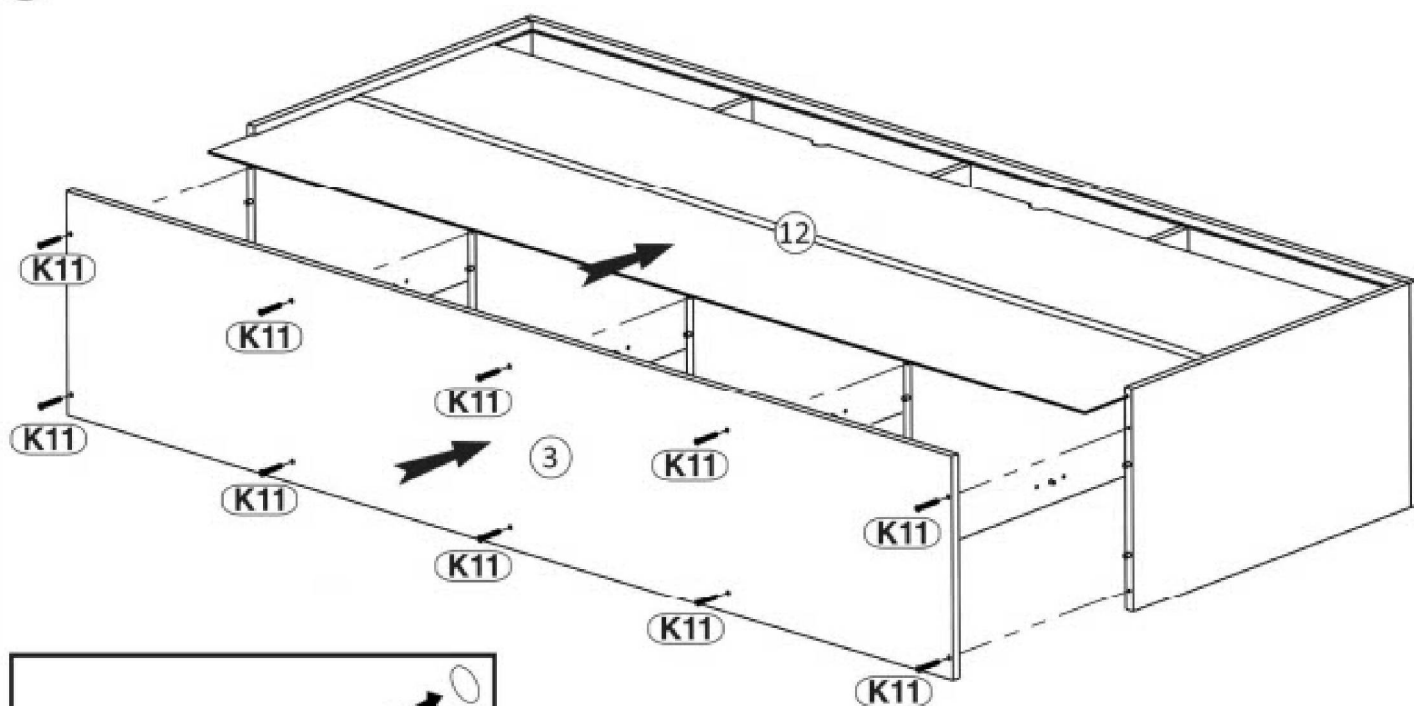




6

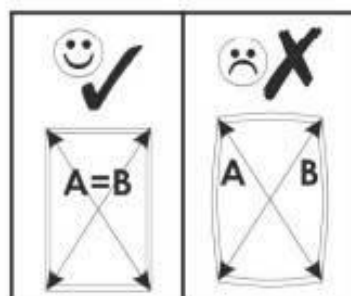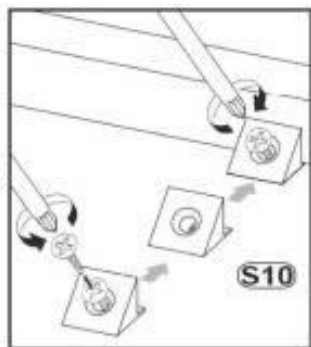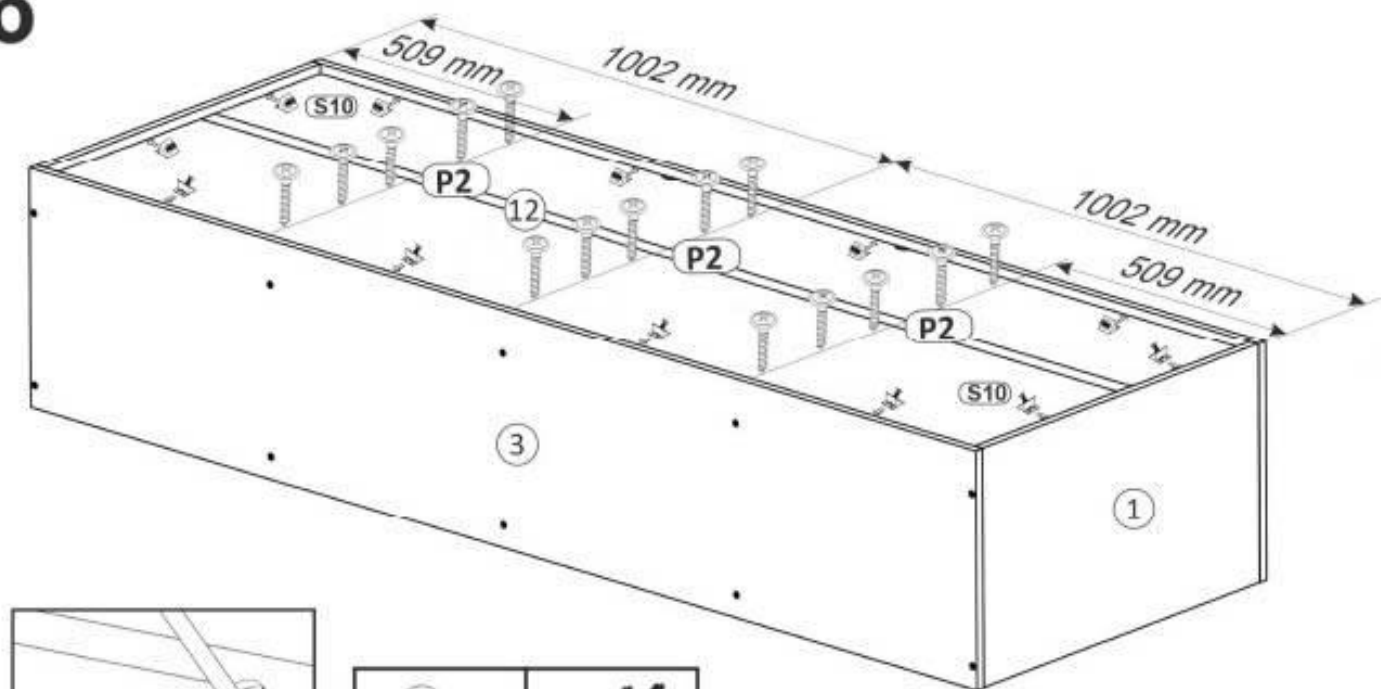

7

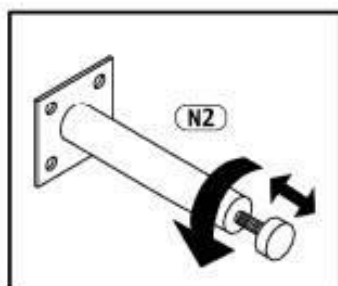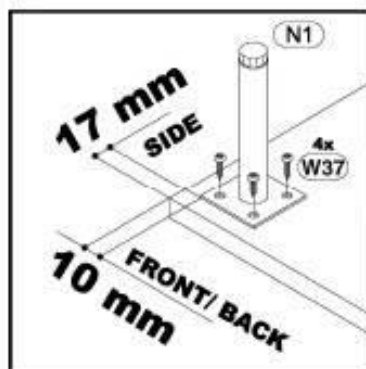
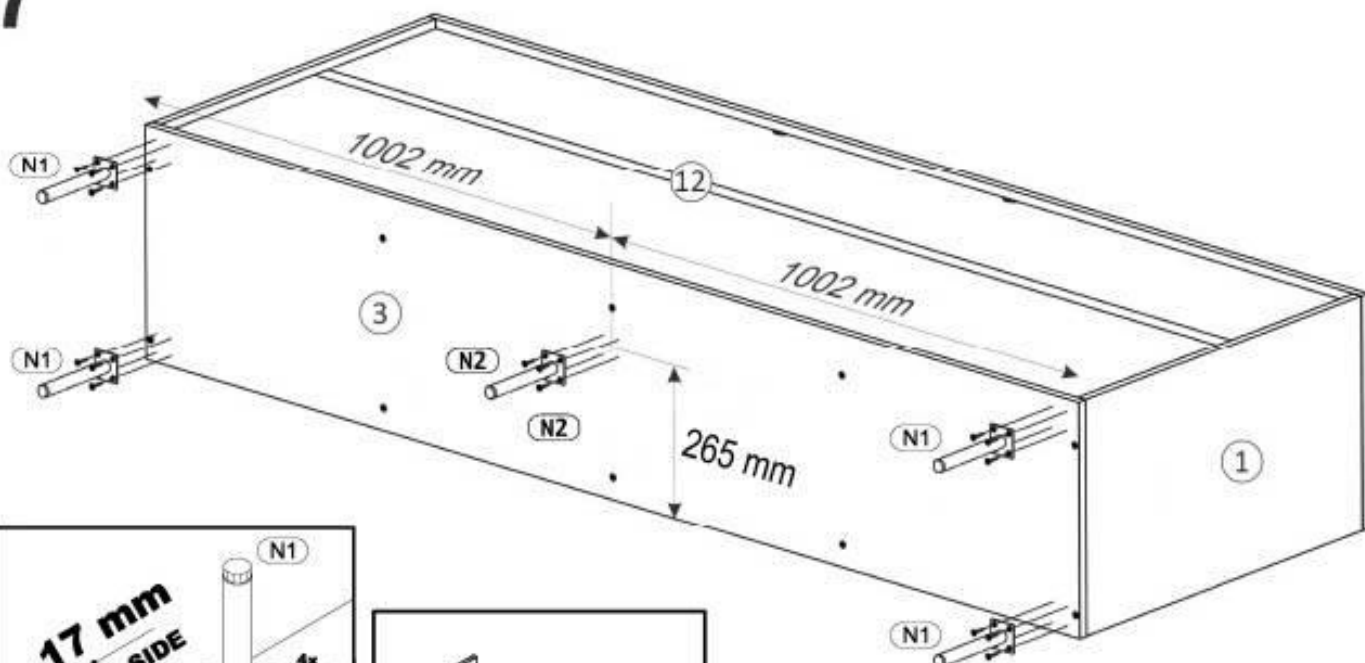


8

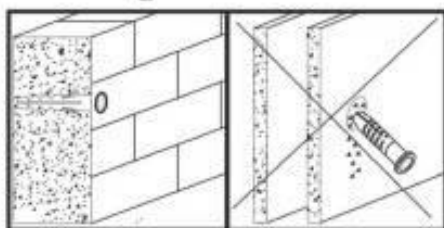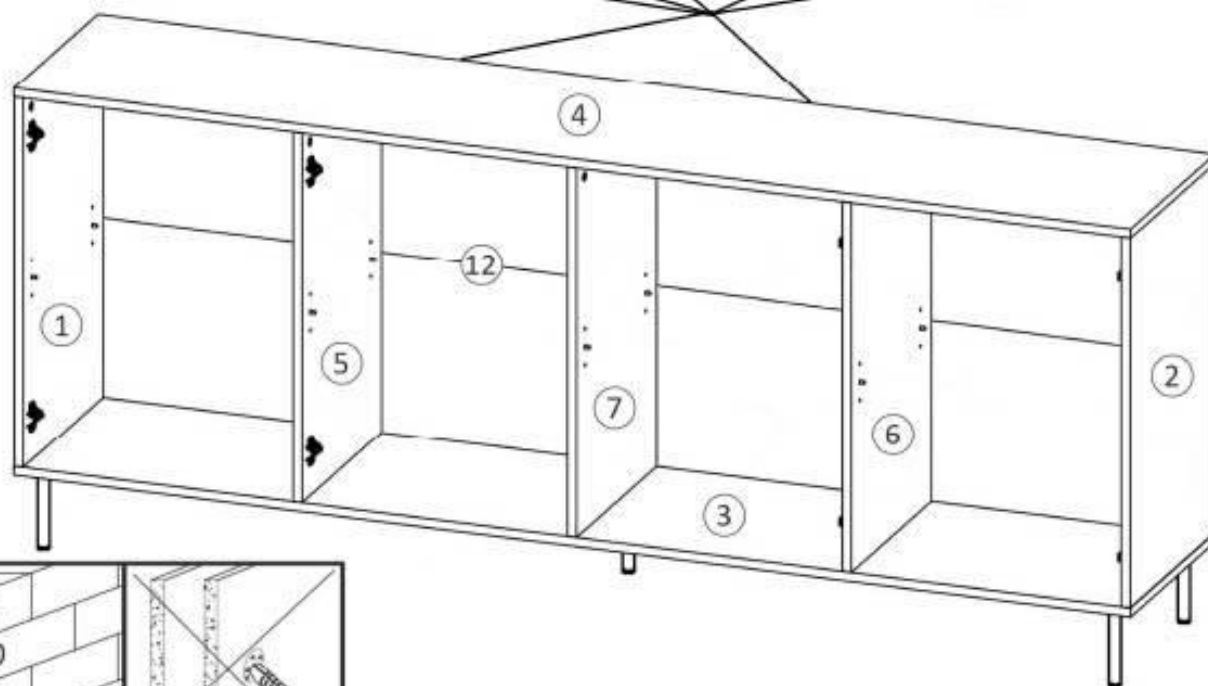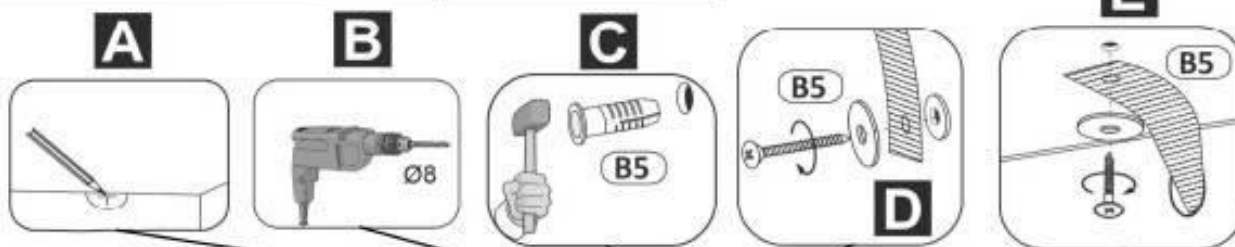

9

X (8) > Y(9)

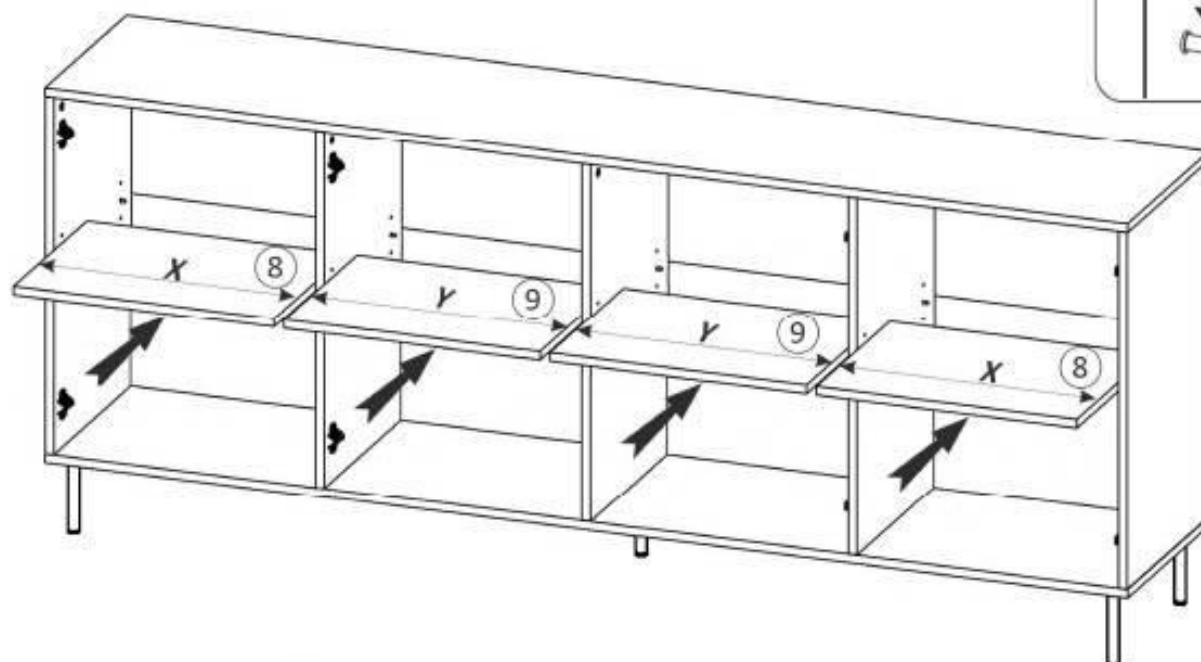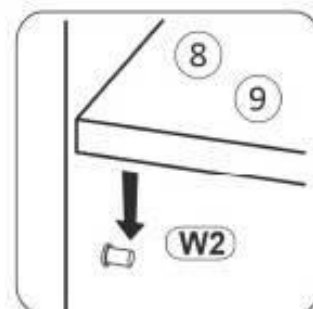

10

